

## °C-Lite Smart / °C-Lite Clima Smart

Digital room thermostat for surface heating and cooling systems with built-in multisensor and Wifi module 2.4 GHz for wireless integration into a SOREL system. Intuitive operation via integrated touch areas and LEDs. Monitoring of the air quality via coloured status LED and measured value display.




### Technical Data

<b>Power Supply</b>	230 VAC	<b>Protection Class</b>	IP 20
<b>Power consumption</b>	1 W - 2,5 W	<b>Dimension</b>	55 mm x 55 mm
<b>Measurement Range</b>		<b>Housing</b>	Plastic Pure white
<b>Temperature</b>	0 °C ... 50 °C	<b>Mounting</b>	Surface / flush-mounted
- Accuracy / resolution:	+/- 1 °C / 0,1 °C		
<b>Humidity*</b>	0% ... 100%		
- Accuracy / resolution:	(+/- 6 % / 0,1 %)		
<b>CO2 equivalent**</b>	0 - 9999 ppm		
<b>Air quality IAQ**</b>	0 - 999		

\* only in °C-Lite Clima Smart version, \*\* as a guideline, only in °C-Lite Clima Smart version

## Wall mounting and electrical connection

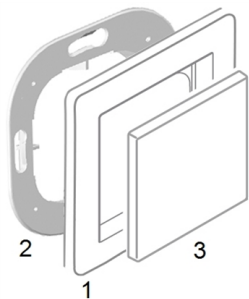

Mount the sensor in a suitable location.



### Caution!

Device and function may be damaged. Select a suitable environmental condition. Direct sunlight, sources of heat and cold, e.g. radiators and windows must be avoided.

### Mounting in flush-mounted switch box

Attach the mounting ring to the switch box with the arrow pointing upwards (2). Make the electrical connection as described below.

### Electrical connection

Connect the sensor to the 230 VAC power supply as shown (blue = neutral conductor N, brown = outer conductor L).




### Attach insert

Hold the cover frame (1 - not included in the scope of delivery) against the mounting ring (2). Align the °C-Lite Smart / °C-Lite Clima Smart (3) to fit the mounting ring and push it on.


### Surface mounting

For surface mounting, use the Mounting set surface-mounted frame high (art. no.: 82003).

## Pairing °CALEON with °C-Lite Smart / °C-Lite Clima Smart

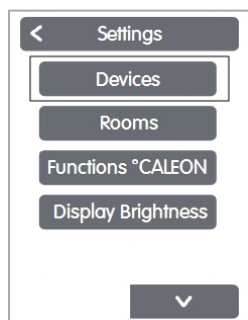

Expert > Settings > Devices

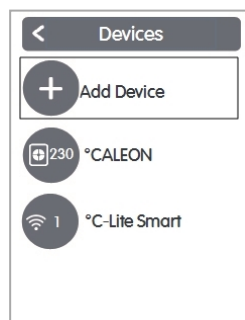

Add Device




Confirm inclusion



Operate smart device

## LED

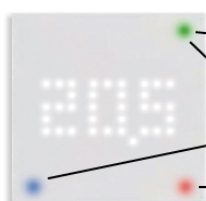

LED Air quality (Clima IAQ), green = good ... see table below

LED white = Touch registered - operation active

LED blue = Reduce setpoint

LED red = Raise setpoint




# Measured values IAQ and CO2 equivalent

In the first few days after installation, the °C-Lite Clima Smart goes through a calibration phase during which fluctuating measurements and major deviations may occur.


CO2	Air quality	IAQ	Air quality*
< 800 ppm	Excellent	0 - 100	Good
800 - 1000 ppm	Good	101 - 150	Moderate
1000 - 1400 ppm	Satisfactory	151 - 200	Unhealthy for sensitive groups of people
1400 - 2000 ppm	Medium (ventilation recommended)	201 - 250	Unhealthy
2000 - 3000 ppm	Bad (ventilation required)	251 - 300	Very unhealthy
> 3000 ppm	Very (ventilation required)	301+ [LED flashes high-frequency]	Hazardous to health

\* The faster the LED flashes, the poorer the air quality


## Operation

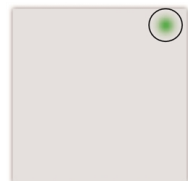

**Standby Screen**  
IAQ ok (°C-Lite Clima Smart) Touching the touch areas activates "Display".

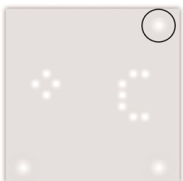


**Measuring unit and measured value display**  
The first touch of the touch area shows the temperature. Repeated touching changes to other measured values and first shows the unit and after a short time the measured value.




**Setpoint adjustment**  
The set temperature can be reduced or increased by touching the blue and red touch areas.

## °C-Lite Smart / °C-Lite Clima Smart room assignment


- There are two ways to assign a room to the °C-Lite Smart / °C-Lite Clima Smart:
- Using the device ID via the °CALEONmenu 'Expert -> Settings -> Rooms -> Room X -> Temperature/ Humidity
  - As described under 1. via the °CALEON menu in combination with the Touch-To-Assign function (T2A) on the °C-Lite.




Expert> Settings > Rooms




Select or add room

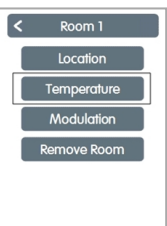


Select sensor type Temperature / Humidity

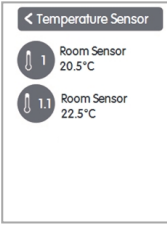


Assign sensor

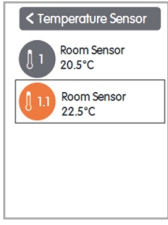


Assignment successful

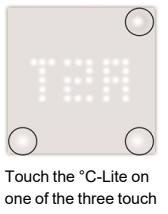


Touch the °C-Lite on one of the three touch areas to assign it to the selected room.

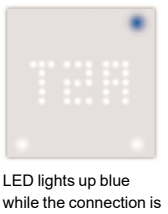

LED lights up blue while the connection is being established.

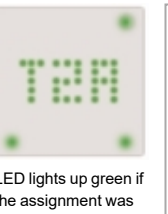


LED lights up green if the assignment was successful.

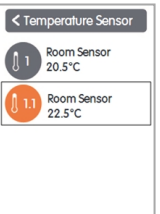


Assignment successful

When opening the sensor list, the °C-Lite automatically switches to T2A mode

## Set room setpoint

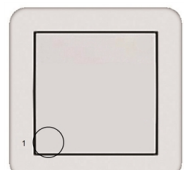

1



2 3

1. Activate the room setpoint menu (1) by touching the touch area (1).  
Reduce (2) or raise (3) the room setpoint by touching the touch areas.

After 20 seconds, the display returns to the standby screen.  
The set room setpoint is valid until the next change via °CALEON timer or manually.

