

Heating Controller LHCC

Heating circuit controller for heating and cooling systems

Installation and operating instructions



Read carefully before installation, commissioning and operation

CONTENT

Safety Instructions	5
EU-Conformity	5
General instructions	5
Explanation of Symbols	5
Changes to the Unit	6
Warranty and Liability	6
Disposal and Pollutants	6
Description LHCC	7
Specifications	7
About the Controller	8
Scope of Supply	8
Hydraulic Variants	9
Wall Installation	11
Installation	12
Electrical Terminals	12
Additional Information	13
External relay at signal output V(X) (0-10V / PWM)	13
Electrical Terminals	13
Electrical Connection	23
Installing the Temperature Sensors	23
Temperature Resistance Table for Pt1000 Sensors	23
Combining multiple SOREL products	23
CAN bus	23
°CALEON Room Controllers	24
RC21 Room thermostat with remote control	26
Operation	28
Display and Input	28
Commissioning help	29
1. Measurement values	29
2. Statistics	30
Today	30
28 days	30
Operating hours	30
Heat quantity	30
Graphic overview	30
Notifications	30
Reset / Clear	30
3. Periods	31
Time & Date	31
Daylight saving time	31
Heating Circuit (Day)	31
Heating Circuit Comfort	31
DHW enable	31
DHW comfort	31
4. Operating mode	32
Manual	32
Mode Circuit (X)	32
5. Settings	33
Heating Circuit (X)	33
Operating mode	33
Season switch	34
S/W Day	34
S/W Night	34
Curve	34
Day Correction	34
Night Correction	34
Comfort Temperature Boost	35
Min. Flow	35
Max. Flow	35
Reference/Actual -	35
Reference/Actual +	35
Variant	35
Heating circuit off	35
Room hysteresis	35
Buffer sensor	36

Insulation factor	36
Overload protection	36
Min. Flow cooling	36
Max. flow cooling	36
Dew Point protection	36
Dew point correction	36
Room Controller Heating Circuit (X)	36
Room Controller	38
Smart grid 1/ PV contact	38
Smart grid 2	38
Settings Domestic Hot Water (DHW)	38
Operating mode	38
Hot water minimum	38
DHW reference	38
DHW comfort	39
DHW hysteresis	39
Buffer DHW load	39
DHW priority	39
DHW sensor	39
Smart grid 1/ PV contact	39

6. Protective Functions	39
Seizing Protection	39
Frost Protection	39
Discharge Protection	40
Dew point correction	40
Pressure Monitoring	40
RPS1 / RPS2	40
RPS Min	40
RPS Max	40
Protective functions for Solar	40
System protection	40
Collector protection	40
Recooling	40
Frost Protection	41
Collector alarm	41
7. Special Functions	41
Program selection	41
Pump settings V(X)	41
Signal type	41
Profile	41
Output Signal	41
PWM / 0-10V off	41
PWM / 0-10V on	41
PWM / 0-10V max.	42
Show signal	42
Speed control	42
Variant	42
Purging time	42
Sweep time	42
Max. Speed	42
Min. Speed	42
Setpoint	42
Sensor Calibration	42
Relay functions	43
Heat quantity	43
Flow temperature sensor (X)	43
Return flow sensor	43
Glycol type	43
Glycol percentage	43
Flow rate supply flow (X)	43
Offset ΔT	43
VFS (X)	43
VFS - Position	44
Reference sensor	44
Commissioning	44
Factory Settings	44
Eco Display Mode	44
Network	44
Access Control	44
Ethernet	44
Datalogger Version	45
CAN bus ID	45
Sensor send interval	45
8. Menu Lock	46
9. Service Values	46

10. Language	46	Increase	53
Function overview	47	Protective Functions	53
Mixer	47	Collector	53
Direction	47	Solar storage	53
Mixer turn time	47	Solar bypass	53
Mixer off factor	47	Variant	53
Mixer increase	47	Bypass sensor	53
Mixer run time	47	Booster Pump	54
Signal type	47	Charge time	54
Cooling valve Heating circuit 1/ Heating circuit 2	47	Zone valve	54
Heating Circuit 2	47	Tmax storage 2	54
Free Cooling	47	Solar storage 2	54
RFI mixer	48	Heat exchanger	54
Operating mode	48	Heat exchanger sensor	54
Reference flow sensor	48	Burner	54
Tref:	48	DHW request	54
Return flow sensor:	48	Heating Circuit request	54
Storage sensor:	48	Burner sensor	54
Direction:	48	Delay	54
Min off time:	48	Burner offset	54
On-time:	48	Eco mode (during solar charge)	54
Off factor:	48	Tmax	55
Increase:	48	Boiler base temperature	55
Max one direction:	48	Base hysteresis	55
Signal type	48	Enable	55
Difference	48	Anti Legionella	55
Δ T Difference	49	Boiler pump	55
DF-Source	49	Boiler pump Tmin	55
Tmin Source	49	Compressor	55
DF-Drain	49	DHW request	55
Tmax Drain	49	HC request	55
Heat transfer	49	Cooling request	55
Δ T Heat transfer	49	Eco mode (during solar charge)	55
HT Tmax	49	Heating circuit offset	55
HT Tmin	49	Min heat pump runtime	56
Source	49	Heat pump idle time	56
Drain	49	Heat pump delay	56
Thermostat	49	Storage charge pump (SLP) overshoot	56
DHW request	50	Bivalent temperature	56
Heating Circuit request	50	Min. outdoor temperature	56
Tset	50	Periods	56
Hysteresis	50	Anti Legionella	56
Energy Saving Mode	50	Loading pump	56
Delay	50	Storage charge pump (SLP) overshoot	56
Thermostat sensor 1	50	Glycol pump	56
Thermostat sensor 2	50	Gylcol pump lag	56
Thermostat enable	50	Return flow increase	56
Electric heating rod (auxiliary heating)	50	Return flow increase Tmin	57
DHW request	50	Return flow increase Tmax	57
HC request	50	ΔT return flow	57
TH Set	50	Return flow sensor	57
Delay	50	Storage sensor	57
Hysteresis	51	Domestic hot water valve	57
Eco mode	51	Circulation	57
Sensor 1	51	Tmin	57
Sensor 2	51	Hysteresis	57
Electric heating rod approval times	51	Circulation sensor	57
Anti-legionella heating rot	51	Circulation pause time	57
Dissipation (Cooling)	51	Purging time	57
Tset	51	Circulations periods	57
Cooling sensor	51	Anti Legionella	57
Delay	51	Error Messages	58
Season switch	51	Error message	58
Off hysteresis	51	Pressure monitor	58
On hysteresis	52	Pressure monitor	58
Cool storage	52	RPS-Type	58
Buffer sensor	52	RPS Max	58
Solid fuel boiler	52	RPS Min	58
Solid fuel boiler Tmax	52	Dehumidifier	58
Solid fuel boiler Tmin	52	Operating mode	58
ΔT Solid fuel boiler	52	Reference humidity	58
Boiler sensor of this function	52	Hysteresis	58
Storage sensor	52	Dehumidifier periods	59
Solar	52	Parallel operation	59
Tmin Collector	52	Parallel operation	59
ΔT Solar	53	Parallel to	59
Tmax Storage	53	Delay	59
Starting aid	53	Follow-up time	59
Purging time	53	Remote	59
		Relay status	59

Title	59
Always on	59
Anti Legionella	59
Malfunctions/Maintenance	61
Tips	62
Support Guideline	62
Appendix	62
Signal	62
Output Signal	62
PWM / 0-10V off	62
PWM / 0-10V on	62
PWM / 0-10V max.	63
Speed when „On“	63
Example for signal settings	63
Technical data PWM and 0-10V	63
Show signal	63
Final Declaration	64

EU-Conformity

By affixing the CE mark to the unit the manufacturer declares that the LHCC conforms to the following relevant safety regulations:

- EU low voltage directive 2014/35/EU
- EU electromagnetic compatibility directive 2014/30/EU

conforms. Conformity has been verified and the corresponding documentation and the EU declaration of conformity are kept on file by the manufacturer.

General instructions

Please read carefully!

These installation and operating instructions contain basic instructions and important information regarding safety, installation, commissioning, maintenance and the optimal use of the unit. Therefore these instructions must be read and understood completely by the installation technician/specialist and by the system user before installation, commissioning and operation of the unit.

This unit is an automatic, electrical Heating circuit controller for heating and cooling systems for/in Heating system and similar applications. Install the device only in dry rooms and under environmental conditions as described under "Technical Data".

The valid accident prevention regulations, VDE regulations, the regulations of the local power utility, the applicable DIN-EN standards and the installation and operating instruction of the additional system components must also be observed.

Under no circumstances does the unit replace any safety devices to be provided by the customer!

Installation, electrical connection, commissioning and maintenance of the device may only be carried out by an appropriately trained specialist. Users: Make sure that the specialist gives you detailed information on the function and operation of the unit. Always keep these instructions in the vicinity of the unit.

The manufacturer does not take over any liability for damage caused through improper usage or non-compliance of this manual!

Explanation of Symbols



Danger

Failure to observe these instructions can result in electrocution.



Danger

Failure to observe these instructions can result in serious damage to health such as scalding or life-threatening injuries.



Caution

Failure to observe these instructions can result in destruction of the unit or the system, or environmental damage.



Caution

Information which is especially important for the function and optimal use of the unit and the system.

Changes to the Unit

- Changes, additions to or conversion of the unit are not permitted without written permission from the manufacturer.
- It is likewise forbidden to install additional components that have not been tested together with the unit.
- If it becomes clear that safe operation of the unit is no longer possible, for example because of damage to the housing, turn the Unit off immediately.
- Any parts of the unit or accessories that are not in perfect condition must be exchanged immediately.
- Use only original spare parts and accessories from the manufacturer.
- Markings made on the unit at the factory must not be altered, removed or made illegible.
- Only the settings described in these instructions may be set using the Unit.



Changes to the unit can compromise the safety and function of the unit or the entire system.

Warranty and Liability

The unit has been manufactured and tested with regard to high quality and safety requirements. The unit is subject to the statutory guarantee period of two years from the date of sale. The warranty and liability shall not include, however, any injury to persons or material damage that is attributable to one or more of the following causes:

- Failure to observe these installation and operating instructions.
- Improper installation, commissioning, maintenance and operation.
- Improperly executed repairs.
- Unauthorised structural changes to the unit.
- Use of the device for other than its intended purpose.
- Operation above or below the limit values listed in the 'Specifications' section.
- Force majeure.

Disposal and Pollutants

The unit conforms to the European RoHS 2011/65/EU for 2011/65/EU the restriction of the use of certain hazardous substances in electrical and electronic equipment.



Under no circumstances may the device be disposed of with the normal household waste. Dispose of the unit only at appropriate collection points or ship it back to the seller or manufacturer.

Specifications

Model	LHCC	Heating Controller
Temperature controller class	VI	
Energy efficiency	4%; When operating at min. 3 ° CALEONs or RC20 a energy efficiency of 5% is achieved	
Standby loss	0,5 W	
Request type heater	On / off operation or modulating	
Electrical specifications:		
Power supply		100 - 240VAC, 50 - 60 Hz
Power consumption / standby		0.5 - 2.5 W/ 0,5 W
Total switched power		2 A
Switched power per relay		460VA
Internal fuse	1	2 A slow 250V
Protection Class		IP40
Protection class / overvoltage category		II / II
Inputs/Outputs		Measuring range
Sensor inputs	6	Pt1000 -40 °C ... 300 °C
Sensor inputs VFS	2	Grundfos Direct Sensor 0°C-100°C (-25°C /120°C short term)
Outputs mechanical relay		4
of relay potential free	R4	1
Mechanical relay	R1 - R4	460VA for AC1 / 460VA for AC3
0-10V/PWM output	V1 - V2	for 10 k Ω working resistance 1 kHz, level 10 V
+ Terminal/ Voltage output	+	Max. load by external devices 24V/6W (e.g. power supply of 3 °CALEON room controllers)
Max. cable length		
VFS/RPS sensors		< 3 m
CAN		< 3 m; at >= 3 m, a shielded twisted pair cable must be used. Isolate shielding and connect it to the protective conductor of <u>only one</u> of the devices. Max. cable length of the complete system 200 m.
0-10V/PWM		< 3 m
24 VDC		< 30 m
mechanical relay		< 10 m
Interface		
Fieldbus	CAN	
Permissible Ambient Conditions		
for controller operation		0 °C - 40 °C, max. 85 % rel. humidity at 25 °C
for transport/storage		0 °C - 60 °C, no moisture condensation permitted
Other Specifications and Dimensions		
Housing Design		2-part, ABS plastic
Installation Methods		Wall installation, optionally panel installation
Overall dimensions		163 mm x 110 mm x 52 mm
Aperture installation dimensions		157 mm x 106 mm x 31 mm
Display		Fully graphical display, 128 x 64 dots
Light diode		multicolour
Real Time Clock		RTC with 24 hour power reserve
Operation		4 entry keys

About the Controller

The Heating circuit controller for heating and cooling systems LHCC facilitates efficient use and function control of your Heating system possible while its handling is intuitive. After every input step the suitable functions are matched to the keys and explained in a text above. In the menu 'measurement values and settings' are help text and graphics in addition to key words.

The LHCC can be used for the various system variants.

Important characteristics of the LHCC are:

- Depiction of graphics and texts using a lit display.
- Simple viewing of the current measurement values.
- Statistics and system monitoring by means of statistical graphics
- Extensive setting menus with explanations.
- Menu block can be activated to prevent unintentional setting changes.
- Resetting to previously selected values or factory settings.

Scope of Supply

- Heating Controller LHCC
- 3 screws 3,5 x 35 mm and 3 plugs 6 mm for wall installation.
- LHCC Installation and operating instructions

Optionally contained depending on design/order:


- Outdoor sensor: TA55 (87005)
- Ethernet connection: optionally possible via datalogger (77701)
- Pt1000 temperature sensor: e.g. TR / S2 (81220)
- Room Controller: °CALEON (70001) / °CALEON Klima (70002)
- CAN Bus Accessories: e.g. CAN Connection kit 1.00m (89211)

Hydraulic Variants




The following illustrations should be regarded only as schematic representations of the respective hydraulic systems and do not claim to be complete. Under no circumstances should the controller replace any safety devices. Depending on the specific application, additional system and safety components such as check valves, non-return valves, safety temperature limiters, scalding protectors, etc., may be required.

①

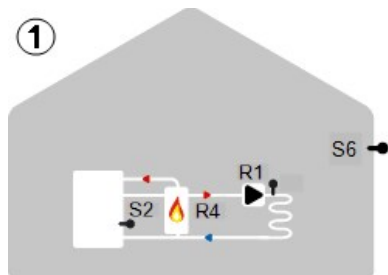


Heating circuit and burner

②

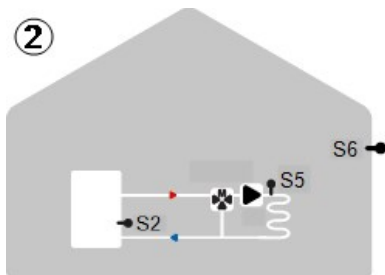


Mixed heating circuit

③

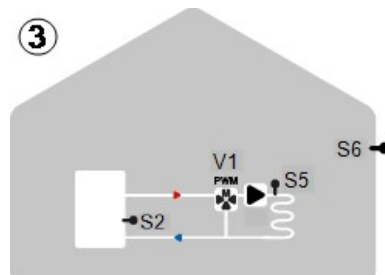


Mixed PWM heating circuit

④

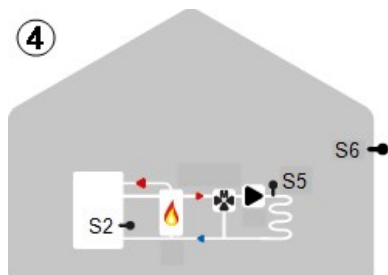


Mixed heating circuit and burner

⑤

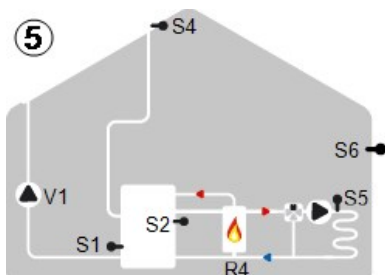


Mixed heating circuit, burner and solar

⑥

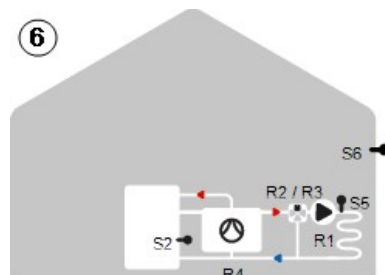


Mixed heating circuit and heat pump

⑦

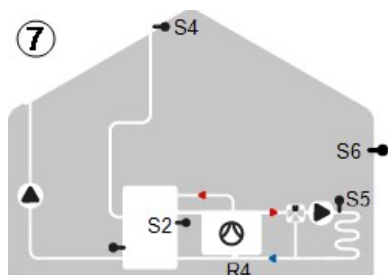


Mixed heating circuit, heat pump and solar

⑧

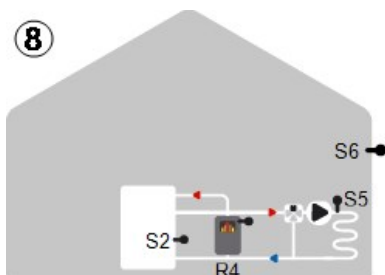


mixed heating circuit and solid fuel solid fuel boiler

⑨

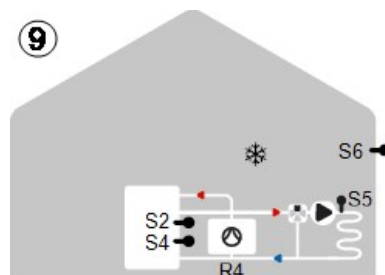


Mixed heating circuit, heat pump and cooling function

⑩

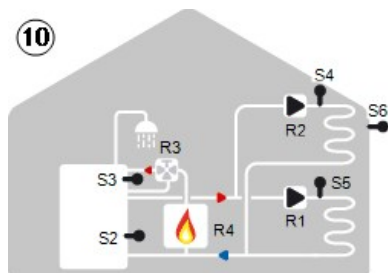


2 heating circuits, combined water tank, DHW-valve and burner

⑪

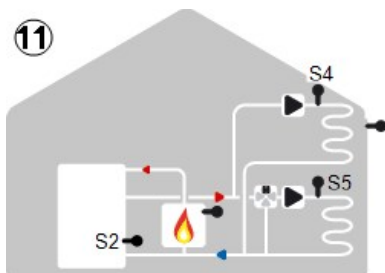


Mixed heating circuit, unmixed heating circuit and burner

⑫

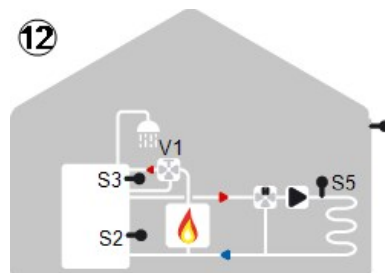


Mixed heating circuit, DHW-valve and burner

⑬

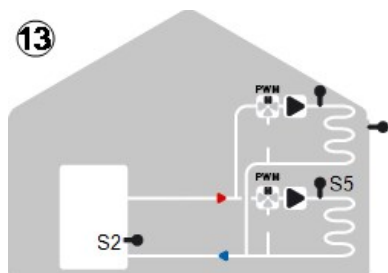


2 mixed PWM heating circuit

⑭

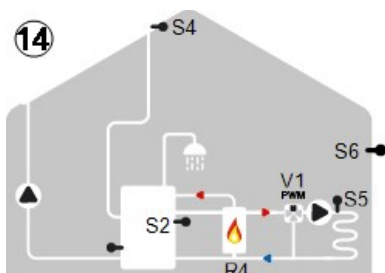


Mixed PWM-Hc, DHW, solar, burner and zone valve

⑮

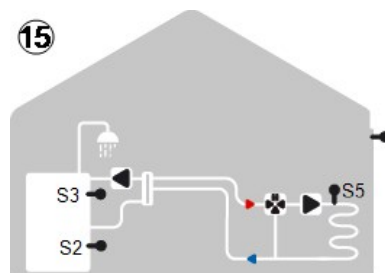


Mixed heating circuit and combination storage

16

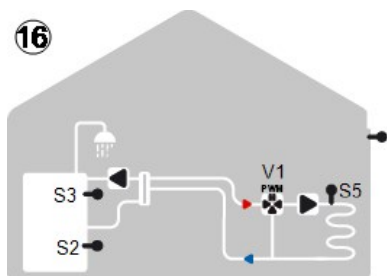


Mixed PWM heating circuit and solid fuel boiler

17

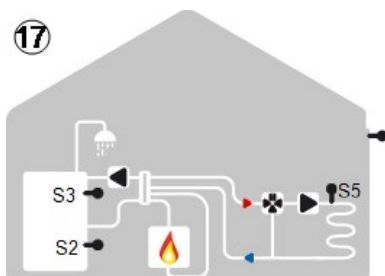


Mixed heating circuit, solid fuel boiler, and burner

18

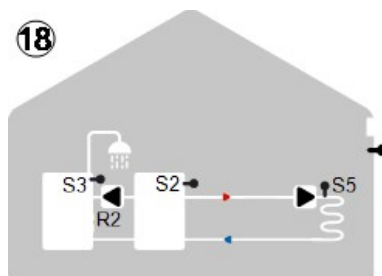


Mixed heating circuit, DHW and Heat transfer

19

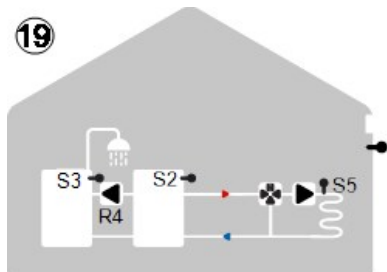


Mixed heating circuit, DHW and heat transfer

20

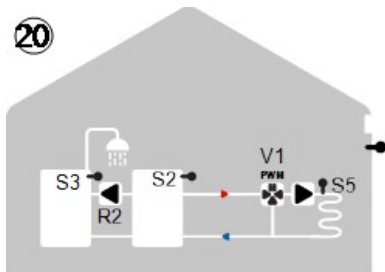


Mixed PWM heating circuit, DHW, and heat transfer

21

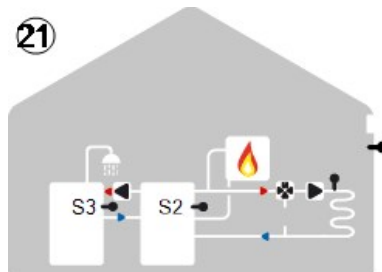


Mixed heating circuit, DHW, heat transfer and burner

22

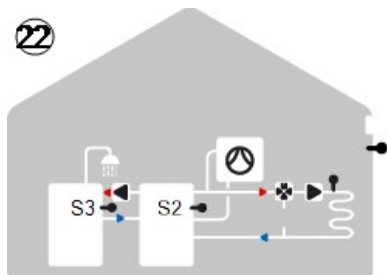


Mixed heating circuit, DHW, heat transfer and heat pump

23

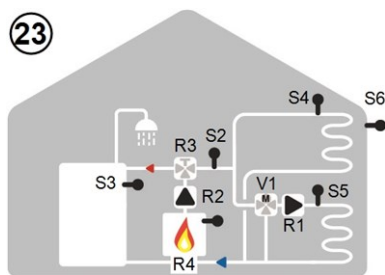


Mixed heating circuit with unmixed heating circuit, solid fuel boiler

24

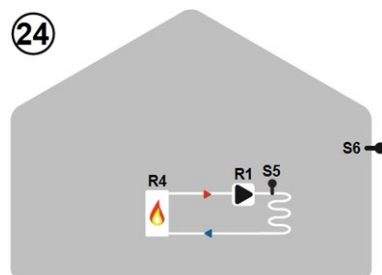


Heating circuit and burner

25

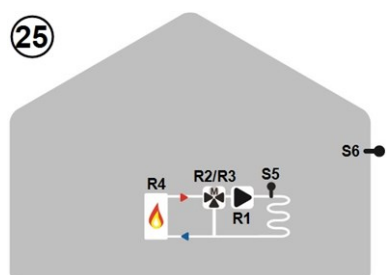


Mixed heating circuit and burner

26

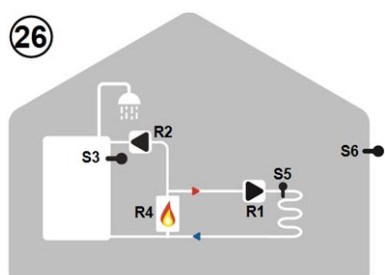


Heating circuit, burner and DHW loading pump


27

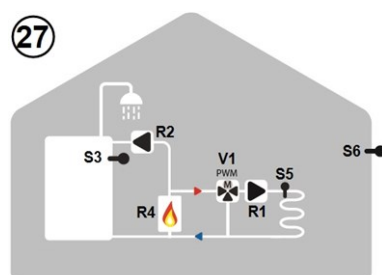


Mixed PWM heating circuit, burner and DHW loading pump

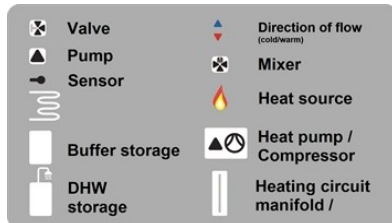

Wall Installation

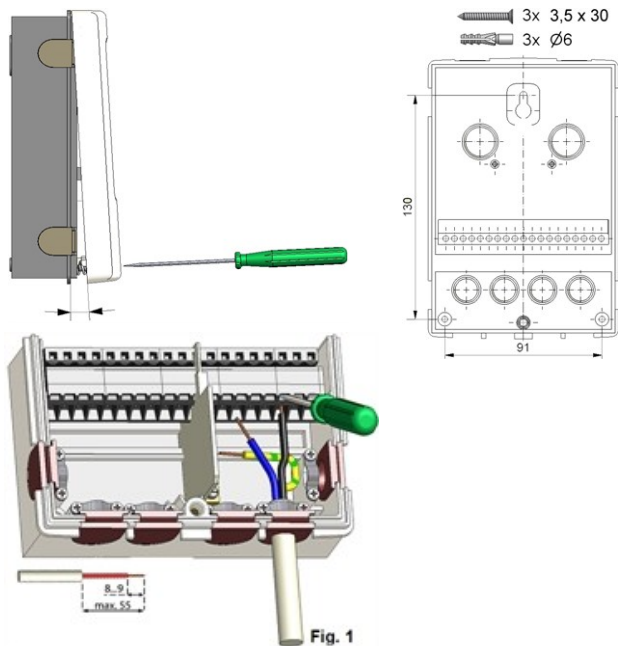

1. Unscrew cover screw completely.
2. Carefully pull upper part of housing from lower part. During the removal, the brackets are released as well.
3. Set upper part of housing aside. Do not touch the electronics.
4. Hold the lower part of the housing in the selected position and mark the 3 mounting holes. Make sure that the wall surface is as even as possible so that the housing does not become distorted when screwed on.
5. Using a drill and size 6 bit, drill three holes at the points marked on the wall and push in the plugs.
6. Insert the upper screw and screw it in lightly.
7. Fit the upper part of the housing and insert the other two screws.
8. Align the housing and tighten the three screws.

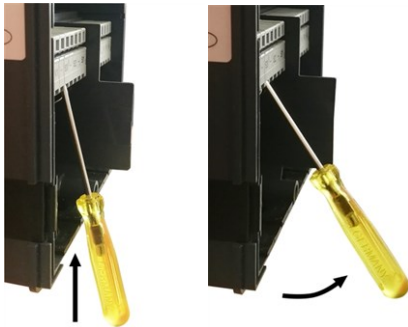

1. Open the terminal cover.
2. Strip lines a max. of 55 mm, assemble the strain reliefs, strip wire ends 8-9 mm.
3. Open clamps with a fitting screwdriver and connect electrical system to the controller.
4. Clip on the terminal cover again and close it with the screw.
5. Turn on mains supply and put the controller into operation.

If problems occur with the operation of the terminals, our video on our YouTube page can help you:

You Tube




<http://www.sorel.de/youtube>


Electrical Terminals



Low voltages
max. 24 VAC / DC

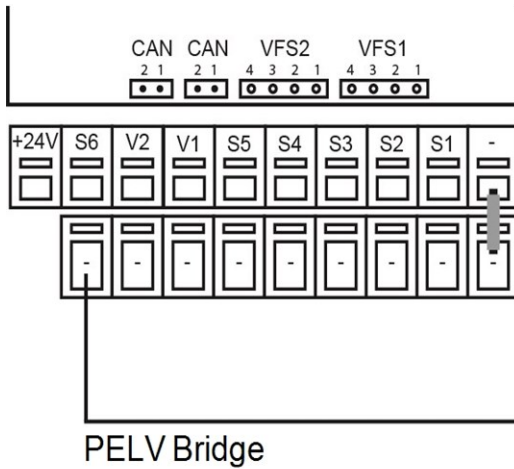

Mains voltages
230 VAC 50 - 60 Hz

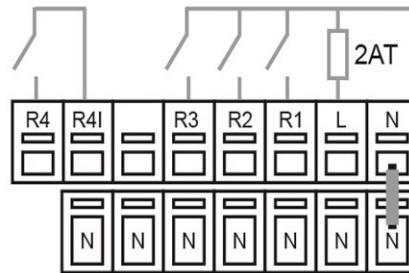

Terminal:	Connection for:
-	GND bridge on the lower ground terminal block
S1	Temperature Sensor 1
S2	Temperature Sensor 2
S3	Temperature Sensor 3
S4	Temperature Sensor 4
S5	Temperature Sensor 5
V1	0-10V / PWM signal output e.g. for controlling high-efficiency pumps
V2	0-10V / PWM signal output e.g. for controlling high-efficiency pumps
S6	Temperature Sensor 6 (outdoor)
+ Terminal/	24V voltage output
Voltage out-	Max. load by external devices 24V / 6W
put	
The connection of the ground wire is made at the lower gray terminal block.	

Terminal:	Connection for:
N	Neutral conductor N
L	Network outer conductor L
R1	Relays 1
R2	Relays 2
R3	Relays 3
R4	Relay 4 (potential-free contact)
R4	Relay 4 (potential-free contact)
The neutral conductor N must be connected to the N terminal block.	




The PE protective conductor must be connected to the PE metal terminal block!



For high-efficiency pumps with 0-10V / PWM signal input, the power can be provided (V1 / V2 parallel operation) over a free relay.

On the control board

VFS1	Grundfos Direct Sensor
VFS2	Grundfos Direct Sensor
CAN	CAN bus connection (1=high,2=low)
CAN	CAN bus connection (1=high,2=low)

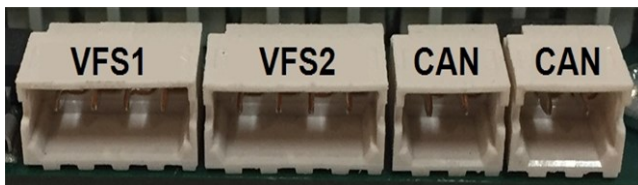


"Connection of PWM pumps"

PWM pumps are connected to the controller with 2 wires **1**) PWM Input (default: brown) **2**) GND (default: blue). Some pumps have a third wire (PWM Output Signal (default: black)). This is not used for the connection!

External relay at signal output V(X) (0-10V / PWM)

With the help of an external relay (art. no. 77502), a 0-10V/PWM output V(X) (V1, V2) can be used to obtain a switching capacity of 230 VAC (I) or a potential-free change-over contact (II). The external relay is then activated via the signal output (0V = "off" (0 VAC or open or closed), 10V = "on" (230VAC or closed or open).


1. Connect external 0-10V relay to signal output, e.g. V1.
2. Assign additional function to signal V1. See "Relay functions " on page 43
3. Disable the speed control for the corresponding 0-10V / PWM output (Off). See "Variant " on page 42

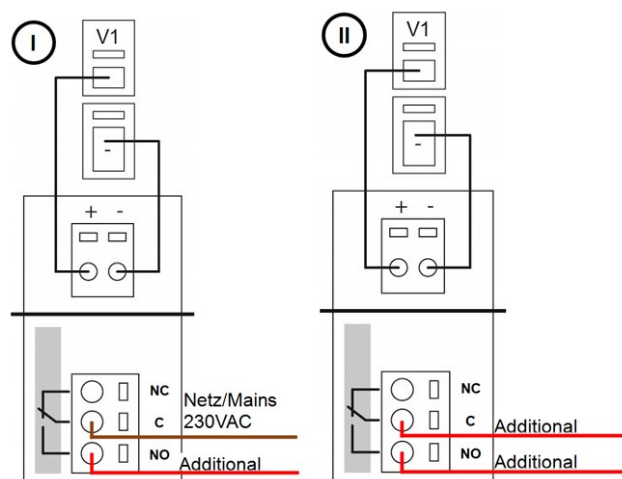

Electrical Terminals


For high-efficiency pumps with 0-10V / PWM signal input, the power can be provided (V1 /V2 parallel operation) over a free relay.

The connection of the ground wire is made at the lower gray terminal block. The neutral conductor N is connected to terminal block N. The PE protective conductor must be connected to the PE metal terminal block!

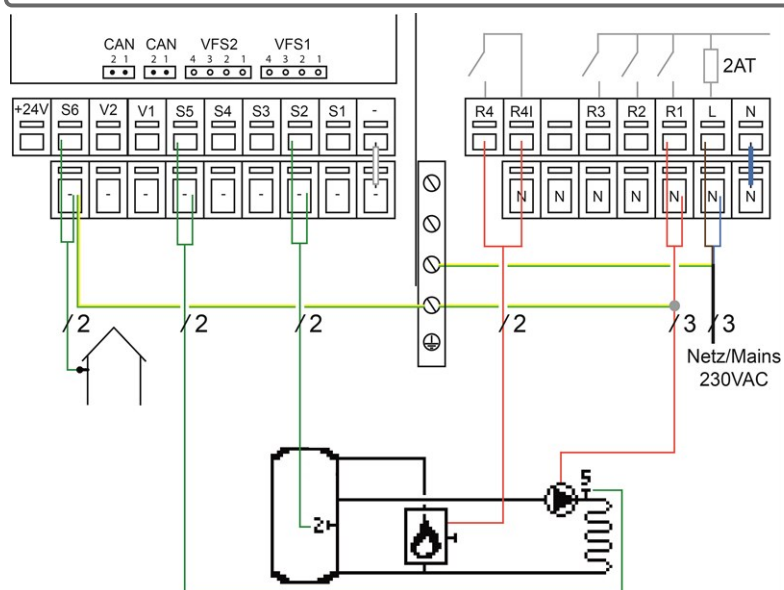


Program 1 heating circuit and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S5	Flow sensor	R1	Heating circ.pump/ Circulation pump
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output Max. external devices 24V/6W	R4	Burner

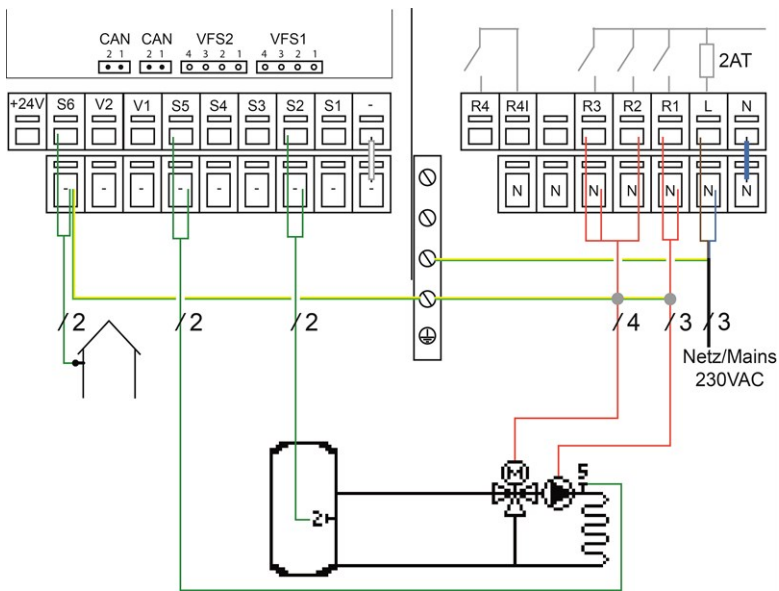


Program 2 mixed heating circuit

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S5	Flow sensor	R1	Heating circ.pump/ Circulation pump
S6	Outdoor sensor	R2	Mixer open
+24V	24V voltage output Max. external devices 24V/6W	R3	Mixer close

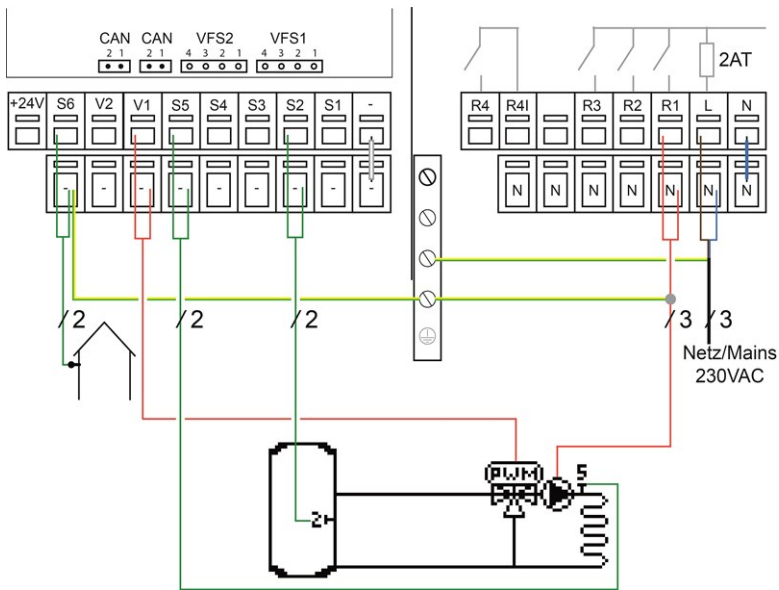


Program 3 mixed PWM heating circuit

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S5	Flow sensor	R1	Heating circ.pump/ Circulation pump
V1	PWM Mixer (external power supply)		
S6	Outdoor sensor		
+24V	24V voltage output Max. external devices 24V/6W		

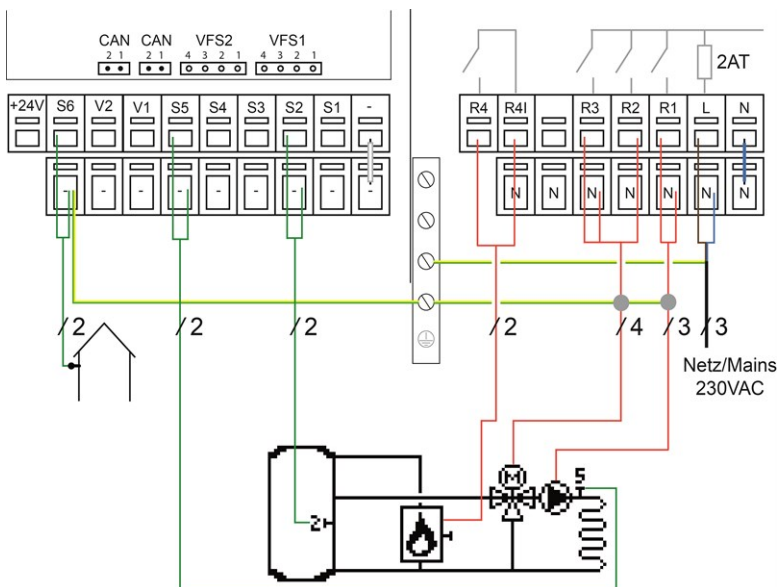


Program 4 mixed heating circuit and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S5	Flow sensor	R1	Heating circ.pump/ Circulation pump
S6	Outdoor sensor	R2	Mixer open
+24V	24V voltage output Max. external devices 24V/6W	R3	Mixer close
		R4	Burner
		R4	Burner

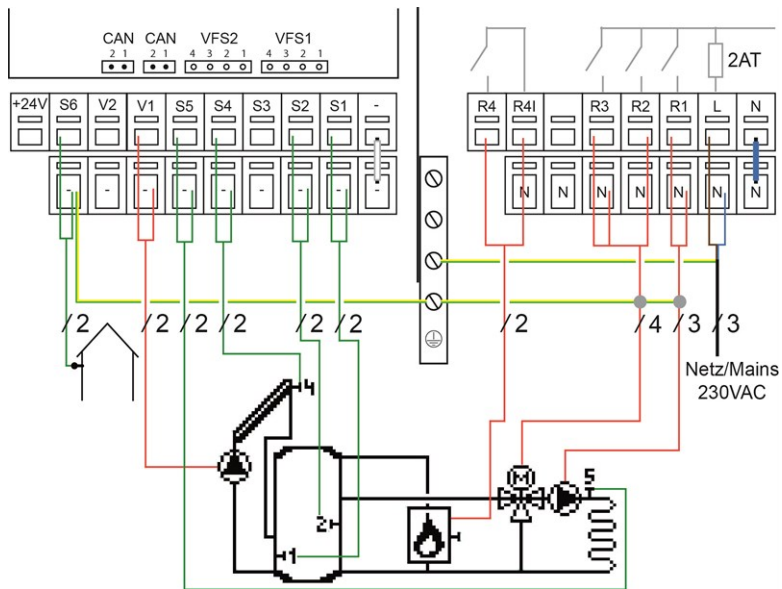


Program 5 mixed heating circuit, burner and solar

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S1	Solar storage sensor	L	Network outer conductor L
S2	Buffer sensor	R1	Heating circ.pump/ Circulation pump
S4	Collector sensor	R2	Mixer open
S5	Flow sensor	R3	Mixer close
V1	Solar pump (external power supply)	R4	Burner
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output Max. external devices 24V/6W		

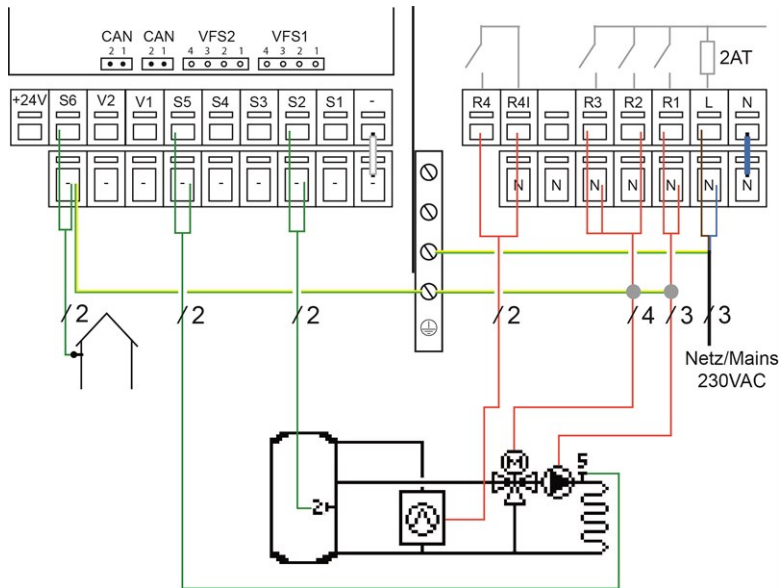


Program 5 mixed heating circuit and heat pump

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S5	Flow sensor	R1	Heating circ.pump/ Circulation pump
S6	Outdoor sensor	R2	Mixer open
+24V	24V voltage output Max. external devices 24V/6W	R3	Mixer close
		R4	Compressor
		R4	Compressor

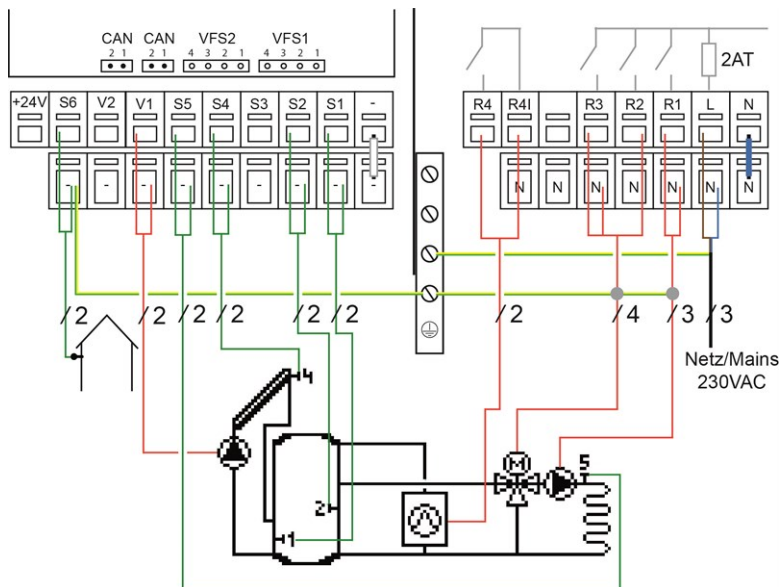


Program 7 mixed heating circuit, heat pump and solar

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S1	Solar storage sensor	L	Network outer conductor L
S2	Buffer sensor	R1	Heating circ.pump/ Circulation pump
S4	Collector sensor	R2	Mixer open
S5	Flow sensor	R3	Mixer close
V1	Solar pump (external power supply)	R4	Compressor
S6	Outdoor sensor	R4	Compressor
+24V	24V voltage output Max. external devices 24V/6W		

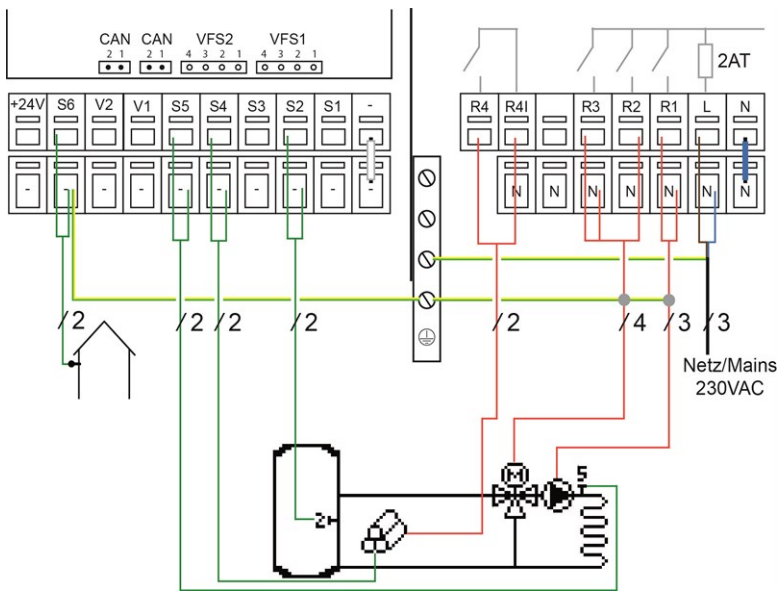


Program 8 mixed heating circuit and solid fuel boiler

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S4	Sensor solid fuel boiler	R1	Pump
S5	Flow sensor	R2	Mixer open
S6	Outdoor sensor	R3	Mixer close
+24V	24V voltage output Max. external devices 24V/6W	R4	Solid fuel boiler
		R4	Solid fuel boiler

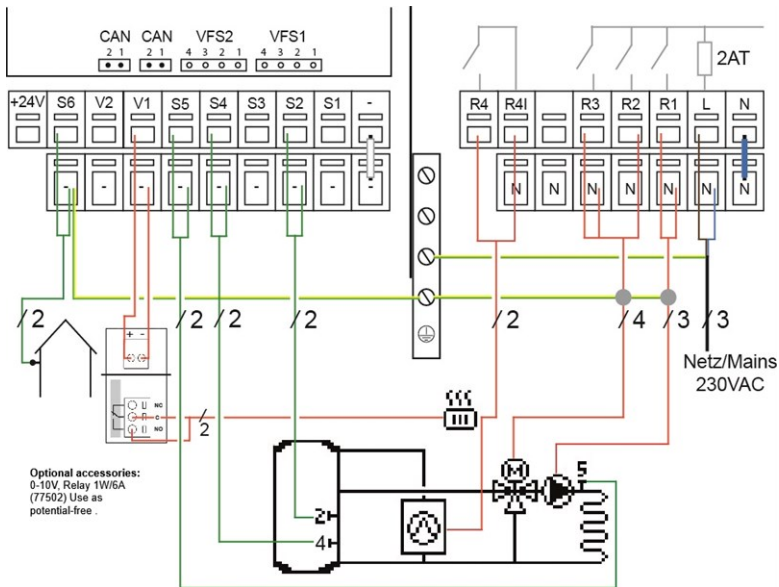


Program 9 mixed heating circuit, heat pump and cooling function

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S4	Buffer sensor 2	R1	Heating circ.pump/ Circulation pump
S5	Flow sensor	R2	Mixer open
V1	Season switch	R3	Mixer close
S6	Outdoor sensor	R4	Compressor
+24V	24V voltage output Max. external devices 24V/6W	R4	Compressor

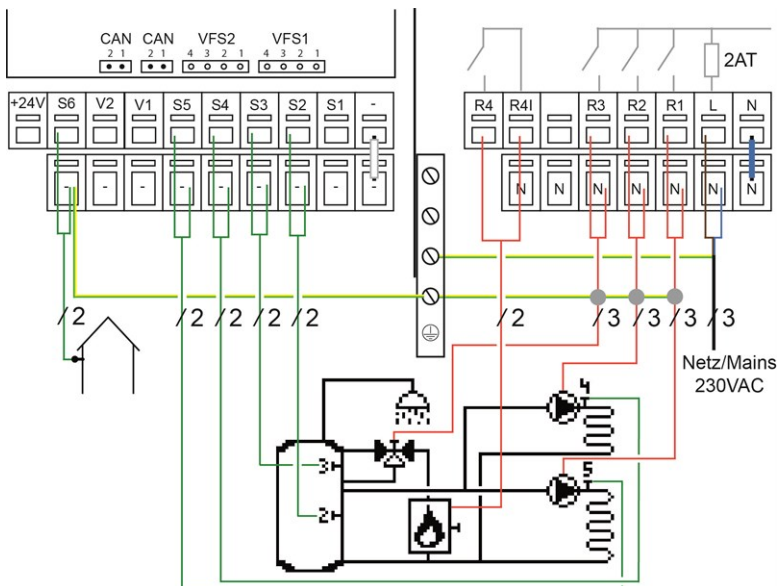


Program 10 2 heating circuits, combined storage, DHW valve and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump heating circuit 2
S4	Flow sensor heating circuit 2	R2	Heating circ.pump/ Circulation pump heating circuit 1
S5	Flow sensor heating circuit 1	R3	DHW valve
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output Max. external devices 24V/6W	R4	Burner

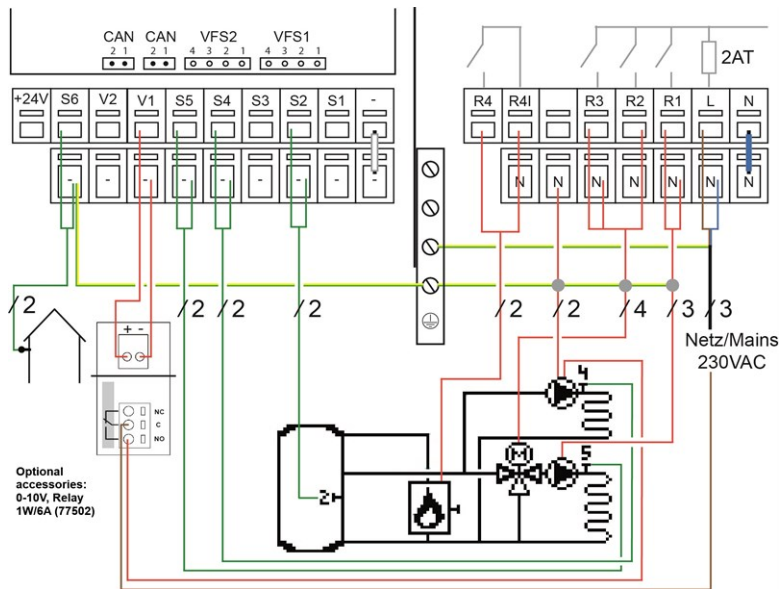


Program 11 mixed heating circuit, unmixed heating circuit and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S4	Flow sensor heating circuit 2	R1	Heating circ.pump/ Circulation pump heating circuit 1
S5	Flow sensor heating circuit 1	R2	Mixer open
V1	Heating circ.pump/ Circulation pump heating circuit 2	R3	Mixer close
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output Max. external devices 24V/6W	R4	Burner

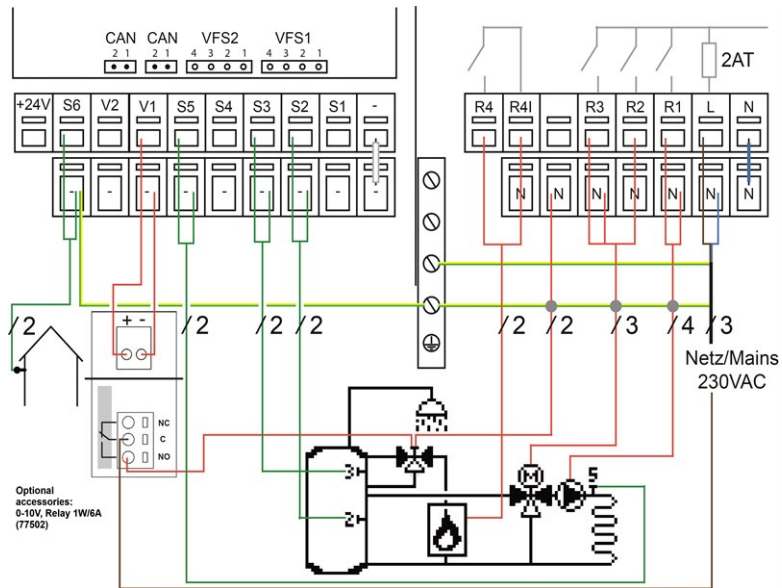


Program 12 mixed heating circuits, DHW valve and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump
S5	Flow sensor	R2	Mixer open
V1	DHW valve (via external relay)	R3	Mixer close
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output Max. external devices 24V/6W	R4	Burner

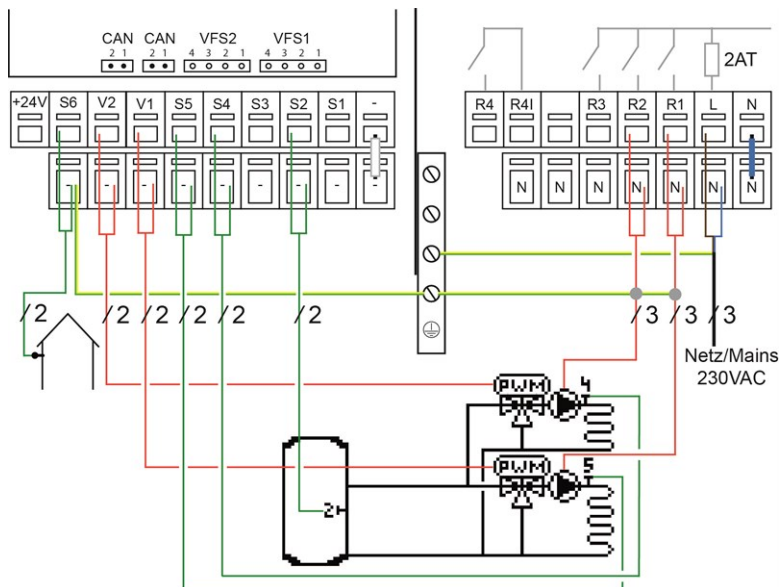


Program 13 2 mixed PWM heating circuits

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S4	Flow sensor heating circuit 2	R1	Heating circ.pump/ Circulation pump heating circuit 2
S5	Flow sensor heating circuit 1	R2	Heating circ.pump/ Circulation pump heating circuit 1
V1	PWM mixer heating circuit 1 (external power supply)		
V2	PWM mixer heating circuit 2 (external power supply)		
S6	Outdoor sensor		
+24V	24V voltage output Max. external devices 24V/6W		

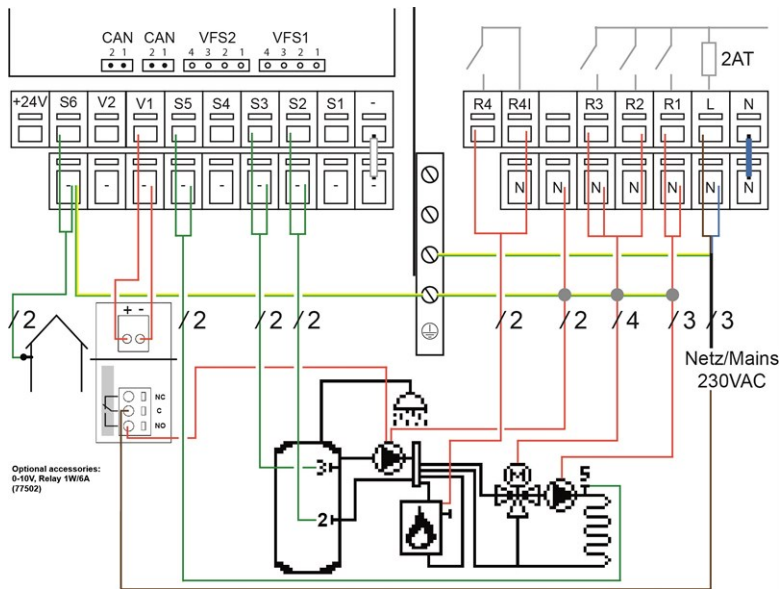


Program 17 mixed heating circuit, storage and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump
S5	Flow sensor	R2	Mixer open
V1	DHW-pump	R3	Mixer close
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output Max. external devices 24V/6W	R4	Burner

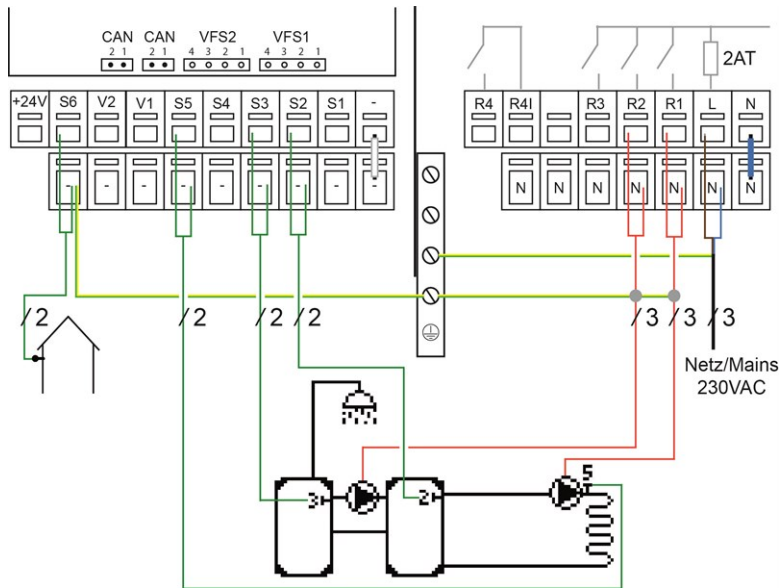


Program 18 unmixed heating circuit, DHW and storage transfer

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump
S5	Flow sensor	R2	DHW-pump
S6	Outdoor sensor		
+24V	24V voltage output Max. external devices 24V/6W		

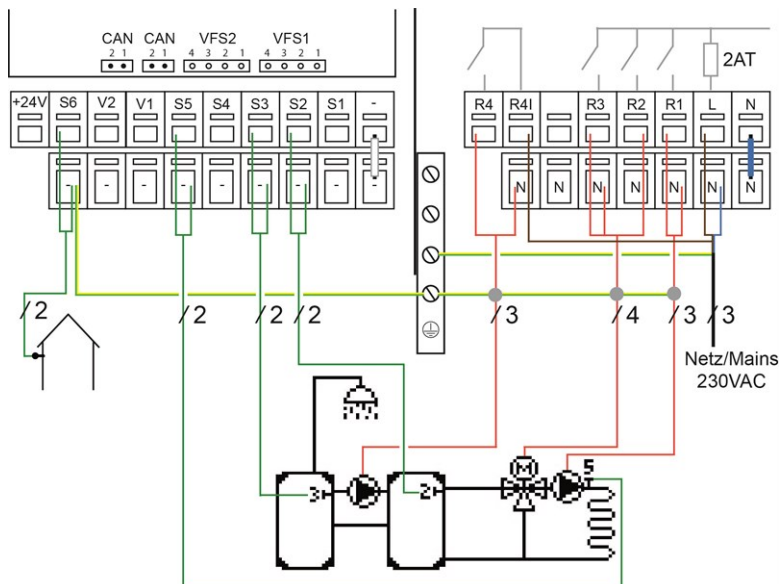


Program 19 mixed heating circuit, DHW and storage transfer

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump
S5	Flow sensor	R2	Mixer open
S6	Outdoor sensor	R3	Mixer close
+24V	24V voltage output Max. external devices 24V/6W	R4	DHW-pump
		R4	DHW-pump

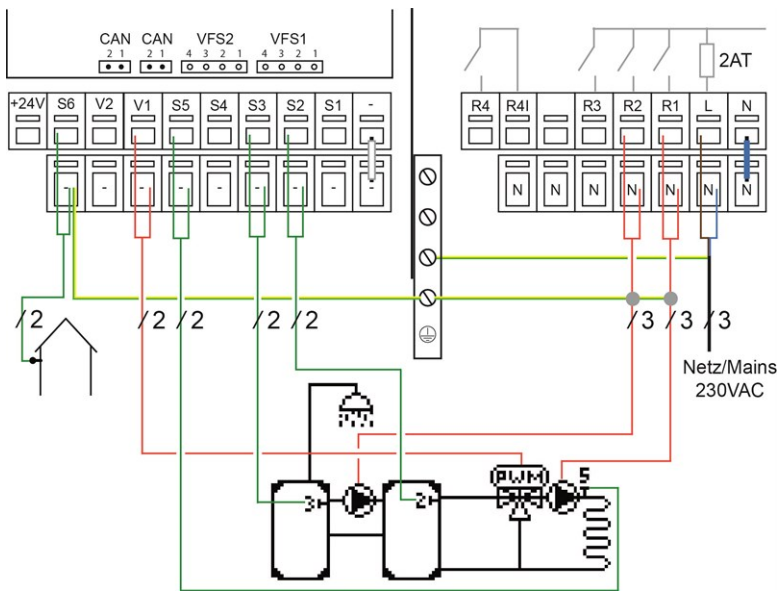


Program 20 mixed PWM heating circuit, DHW and storage transfer

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump
S5	Flow sensor	R2	DHW-pump
V1	PWM mixer		
S6	Outdoor sensor		
+24V	24V voltage output		
	Max. external devices 24V/6W		

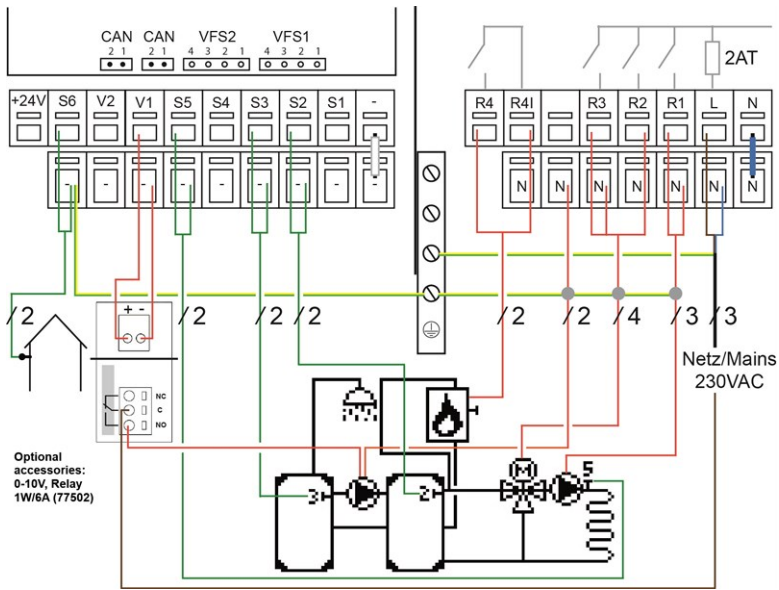


Program 21 mixed heating circuit, DHW, storage transfer and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump
S5	Flow sensor	R2	Mixer open
V1	DHW-pump	R3	Mixer close
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output	R4	Burner
	Max. external devices 24V/6W		

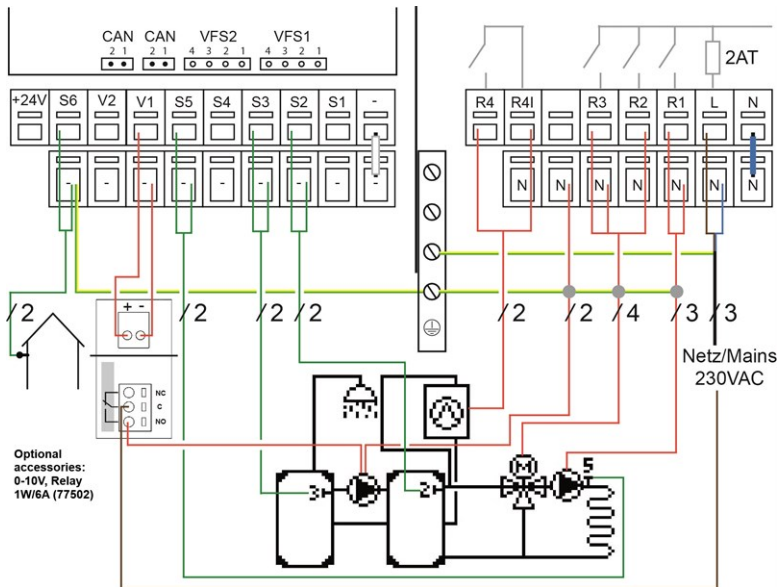


Program 22 mixed heating circuit, DHW, storage transfer and heat pump

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump
S5	Flow sensor	R2	Mixer open
V1	DHW-pump	R3	Mixer close
S6	Outdoor sensor	R4	Compressor
+24V	24V voltage output	R4	Compressor
	Max. external devices 24V/6W		

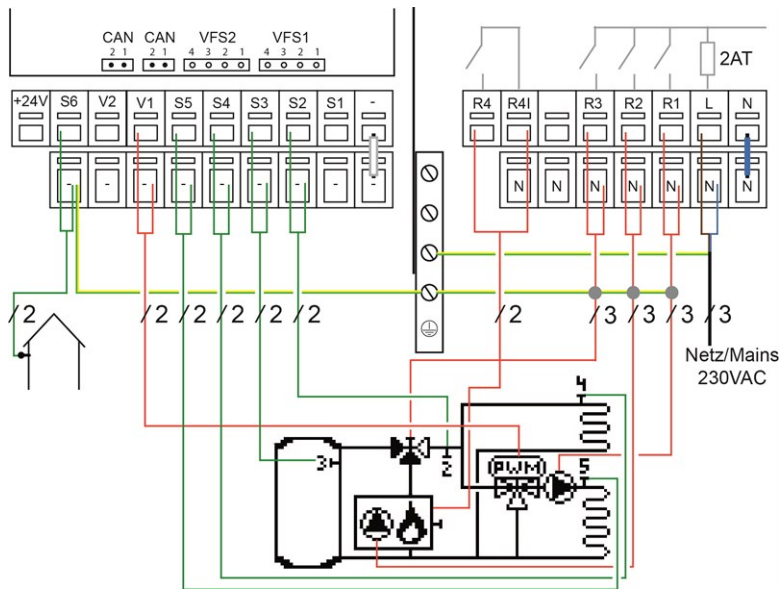


Program 23 mixed heating circuit, unmixed heating circuit and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S2	Buffer sensor	L	Network outer conductor L
S3	DHW sensor	R1	Heating circ.pump/ Circulation pump
S4	Flow sensor	R2	Boiler pump
S5	Flow sensor	R3	DHW valve
V1	PWM mixer	R4	Burner
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output Max. external devices 24V/6W		

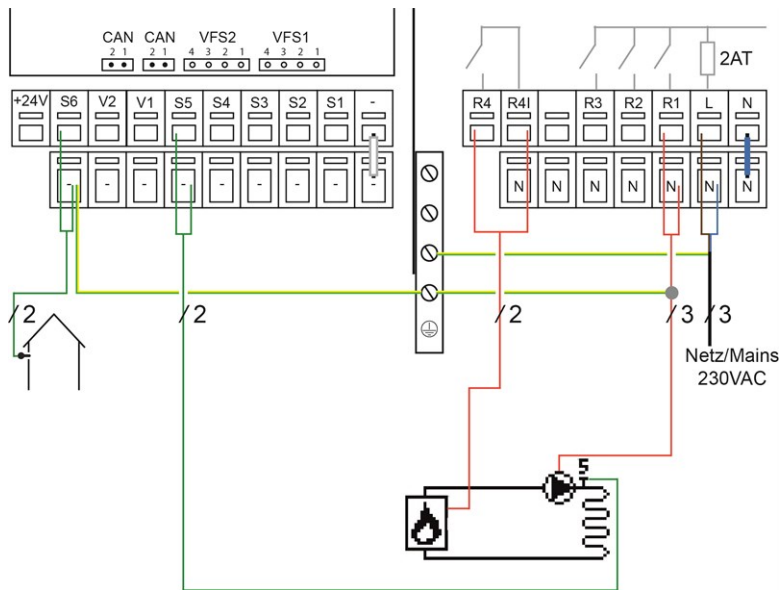


Program 24 heating circuit and burner

Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S5	Flow sensor	L	Network outer conductor L
S6	Outdoor sensor	R1	Heating circ.pump/ Circulation pump
+24V	24V voltage output Max. external devices 24V/6W	R4	Burner
		R4	burner

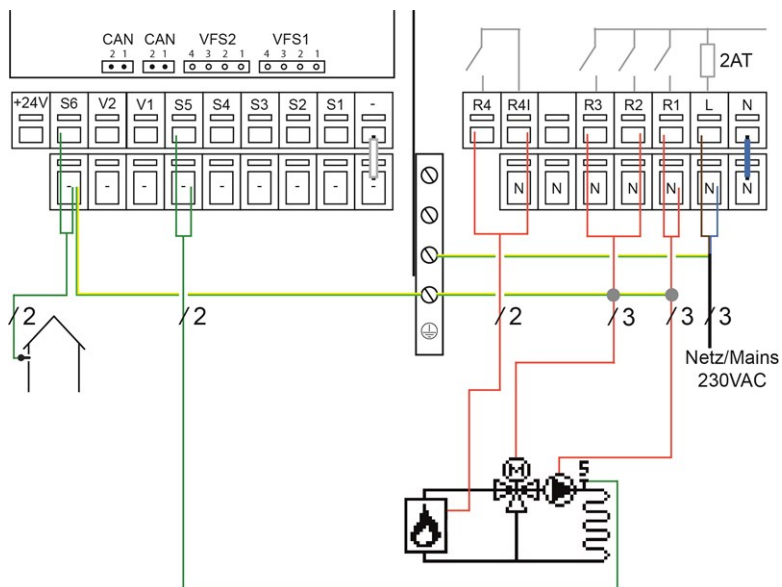

Program 25 mixed heating circuit and burner


Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S5	Flow sensor	L	Network outer conductor L
S6	Outdoor sensor	R1	Heating circ.pump/ Circulation pump
+24V		R3	Mixer
		R4	Burner
		R4	burner

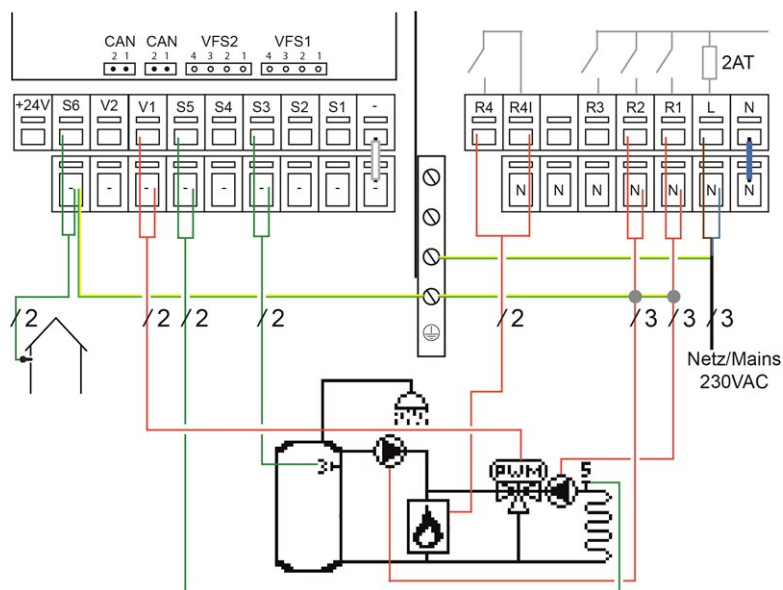



Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S3	DHW sensor	L	Network outer conductor L
S5	Flow sensor	R1	Heating circ.pump/ Circulation pump
S6	Outdoor sensor	R2	DHW-pump
+24V	24V voltage output	R4	Burner
	Max. external devices 24V/6W	R4	Burner


Terminal:	Connection:	Terminal:	Connection:
-	GND	N	Neutral conductor N
S3	DHW sensor	L	Network outer con- ductor L
S5	Flow sensor	R1	Heating circ.pump/ Circulation pump
V1	PWM mixer	R2	DHW-pump
S6	Outdoor sensor	R4	Burner
+24V	24V voltage output Max. external devices 24V/6W	R4	Burner


Electrical Connection

 Before working on the unit, switch off the power supply and secure it against being switched on again! Check that there is no power flowing! Electrical connections may only be made by a specialist and in compliance with the applicable regulations. The unit may not be put into operation if there is visible damage to the housing, e.g. cracks.

 The unit may not be accessible from behind.


 Low-voltage cables such as temperature sensor cables must be routed separately from mains voltage cables. Feed temperature sensor cables only into the left-hand side of the unit, and mains voltage cables only into the right-hand side.


 The customer must provide an all-pole disconnecting device, e.g. an emergency heating switch.

 The cables being connected to the unit must not be stripped by more than 55 mm, and the cable jacket must reach into the housing just to the other side of the strain relief.

Installing the Temperature Sensors

The controller operates with Pt1000 temperature sensors which are accurate to 1 °C, ensuring optimal control of system functions.

 If desired, the sensor cables can be extended to a maximum of 30 m using a cable with a cross-section of at least 0.75 mm². Ensure there is no contact resistance! Position the sensor precisely in the area to be measured! Only use immersion, pipe-mounted or flat-mounted sensors suitable for the specific area of application with the appropriate permissible temperature range.

 Low-voltage cables such as temperature sensor cables must be routed separately from mains voltage cables. Feed temperature sensor cables only into the left-hand side of the unit, and mains voltage cables only into the right-hand side.


Temperature Resistance Table for Pt1000 Sensors

°C	-20	-10	0	10	20	30	40	50	60	70	80	90	100
Ω	922	961	1000	1039	1077	1116	1155	1194	1232	1270	1308	1347	1385

Combining multiple SOREL products

SOREL devices with CAN Bus such as HCC controller, Datalogger or °CALEON Room Controller can be networked to communicate with each other and intelligently control larger systems.

CAN bus

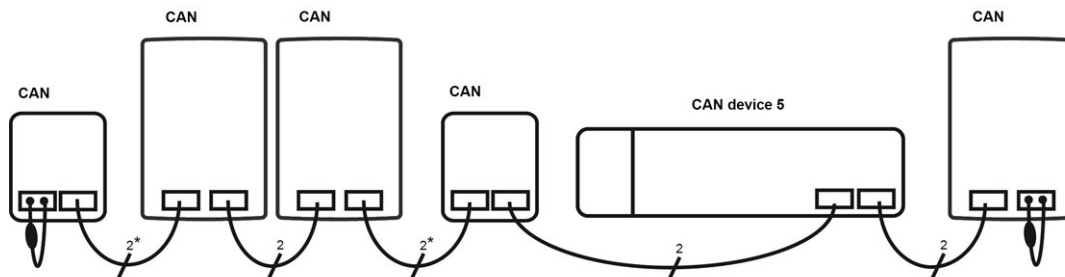

1. The CAN devices are connected in series with the CAN bus cable.
2. The first and last CAN device in this connection in series must be fitted with terminating resistance.

The wiring of the two CAN sockets is arbitrary.

°CALEON Room Controllers



°CALEON is an optional accessory and is normally not included in the scope of supply.

Accessories


Each °CALEON comes with an accessory bag that contains everything (except the CAN cable) needed to connect to an HCC. The following components are used for the electrical connection:

1. Molex adapter for the CAN connection
2. Single wire connector to easily connect the Molex adapter to the CAN cable
3. Terminating resistor for the 2nd CAN bus connection on the HCC (if it is not used).



Can cable: <3m; at >=3m a shielded, twisted-pair cable is to be used. Isolate shielding and connect it to the protective conductor on one end. Max. cable length of the complete system 200 m.

Wiring

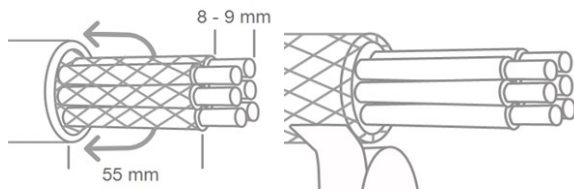

Cable strip off max. 55 mm, insulate all wire ends 8-9 mm and insert shielding over the cable. Insulate the entire shielding with tape.




Wire ferrules made of brass can be difficult to clamp due to their asymmetric crimping shape. In this case, remove the wire ferrule. The plug-in terminals are also suitable for flexible cables.



Any contact between protective conductor and circuit board can cause serious damage.

Wiring of a °CALEON with controller

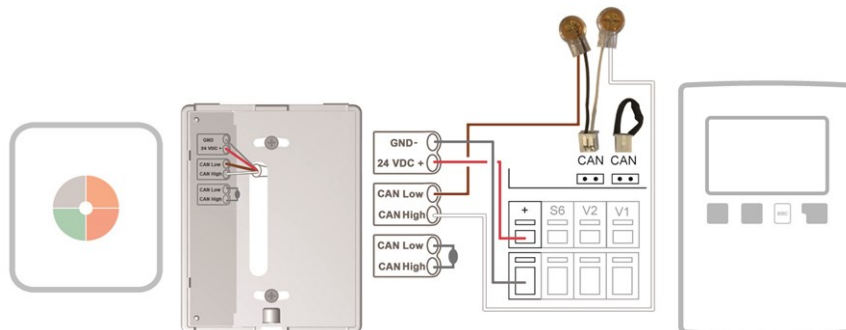


When connecting the CAN-Bus cable, make sure that the correct pairs of wires are twisted. The assignment is identical to the terminal pairs on the °CALEON room controller.

- > GND + 24VDC
- > CAN Low + CAN High

Wiring of several °CALEONs with controller



The 24V power supply of the LHCC is designed for a load of up to 6W. This can supply 3 °CALEON room controllers. For loads > 6W, an external power supply must be used.

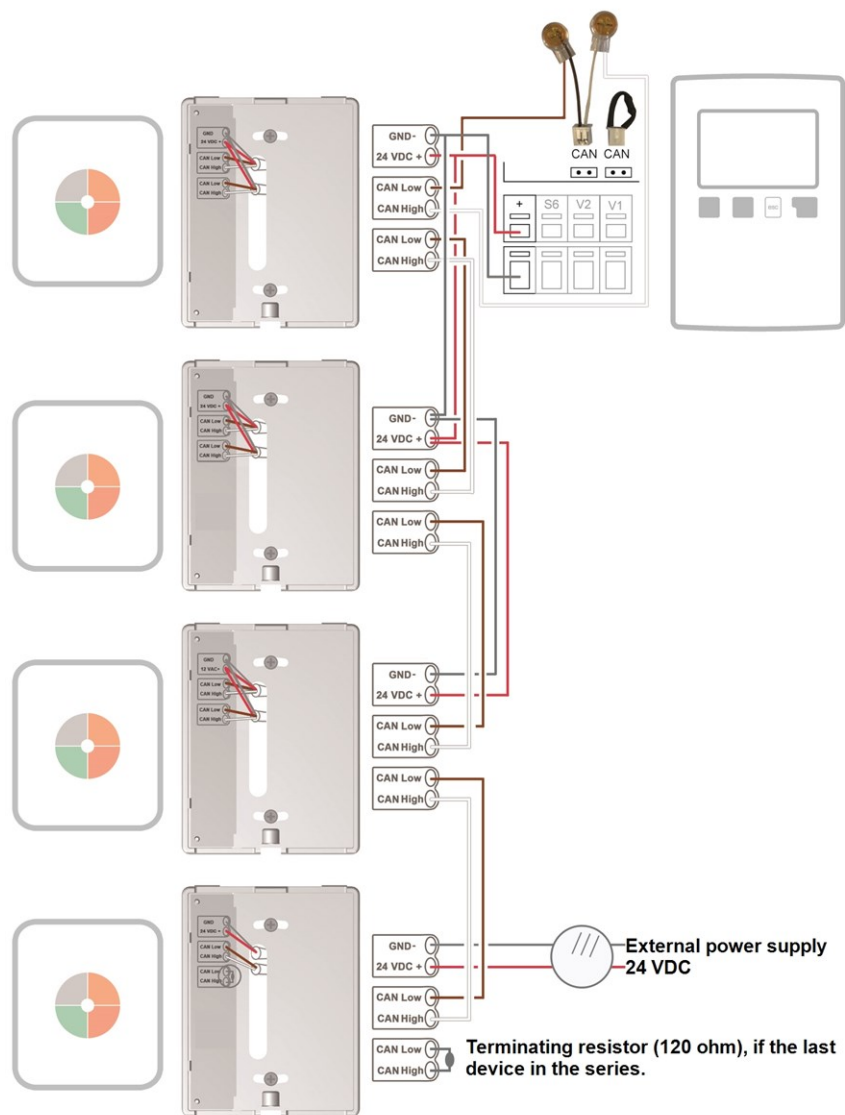

Configuration

First, the °CALEON must be set up directly on the room controller. The automatic start-up wizard (Overview > Operating Mode > Menu > Expert > Factory Settings) and the °CALEON user manual will help you.



If not already done, set up the HCC now with the help of the commissioning wizard.


The setup of the room controller is done in the following menu:

5. Settings -> 5.1. Heating circuit 1 -> 5....24. Room controller

5....1. Thermostat

Here, you select the room created in °CALEON. The rooms represented by symbols in °CALEON are given written names in the HCC. The assignment can be found in the following table.


	Bathroom		Children 3		Room 2
	Bathroom 2		Corridor		Room 3
	Bathroom 3		Corridor 2		Room 4

	Bathroom 4		Dining		Room 5
	Bedroom		Kitchen		Room 6
	Bedroom 2		Living		Room 7
	Bedroom 3		Office		Room 8
	Children		Office 2		Room 9
	Children 2		Room 1		Room 10

5....12. Room controller

This value can be adjusted as to the amount of influence the room temperature will have on the reference flow temperature, as a percentage. For each degree deviation between room temperature and reference temperature, the percentage of the calculated set flow temperature set here is added to the set flow temperature or subtracted from it up to the min. or max. values set under the protective functions.

Example: Reference room temp.: e.g. 25 °C; room temp.: e.g. 20 °C ±5 °C. Calculated reference temp.: e.g. 40 °C: room controller: 10 % = 4 °C 5 X 4 °C = 20 °C. Accordingly, 20 °C are added to the reference flow temperature, giving 60 °C. If the value is higher than the one set in "Max. flow temp", the resulting temperature will be the one set in "Max. flow temp".


 The setting parameters "5....13. Room ref. day" and "5....14. Room ref. night" have no influence, when using a °Caleon and can be ignored.

Under "5...2. Thermostat" further °CALEONS can be set optionally as room controllers. The same system as for the first room controller applies.

5. Settings -> 5.1. Heating circuit 1 -> 5.15. Heating circuit off

If you want the heating circuit to switch off in addition to summer-winter shutdown, even if the room temperature is reached, set "summer + room" here.

RC21 Room thermostat with remote control

 The RC21 room thermostat is an optional accessory and is normally not included in the scope of supply.

The remote control with integrated thermostat RC21 provides you with easy to use temperature controlled adjustment of the temperature from within your living space.

Setting options




The RC21 control dial parallel shifts the heating circuit characteristic stored in the controller. The flow temperature (depending the outdoor temperature) is increased or decreased respectively by this. When the dial is turned all the way down, the heat circuit is switched off. Frost protection stays active to prevent damage.

Temperature Sensors

The RC21 room thermostat has a built-in temperature sensor, the values of which are registered, used and displayed in the controller. If the settings in the controller allow it, the sensor is used to alter the flow temperature.

Operating Modes

The slider can be moved to the following operating modes.

-  In automatic mode, the temperature is controlled according to the set thermostat periods.
-  In continuous day mode, the set times are ignored and the temperature is controlled according to the day settings.
-  In continuous night mode, the temperature is usually reduced. This setting is suitable, for example, for periods of prolonged absence (e.g. holidays).


Installation

Carefully remove the dial from the housing with a screwdriver. Loosen the screw beneath. Remove the light-coloured part of the housing from the base.

The following picture shows exemplary wiring.

The RC21 is connected to the controller via 3 wires.

- 1) Remote control -> to a free sensor input (S1-S6)
- 2) Temperature sensor -> to a free sensor input (S1-S6)
- 3) GND

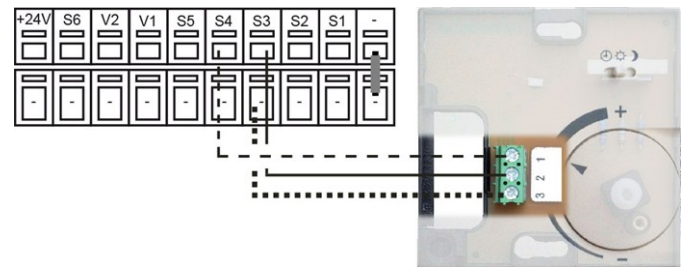

The setup of the room controller is done in the following menu:

5. Settings -> 5.1. Heating circuit 1 -> 5.24. Room controller

5....1. Thermostat

Select "RC21-Local 1".

5....10. RC 1 Temp 1

Select here the sensor input that you use for the temperature sensor (Terminal 1) of the RC21.

5....11. RC 1 contr.

Select here the sensor input that you use for the remote control (Terminal 2) of the RC21.

"5....13. Room ref. day" / "5....14. Room ref. night"

Setting the desired room temperature for day/night operation.

5....12. Room Controller

This value is used to appoint the amount of influence the room temperature has on the reference flow temperature, as a percentage. For each degree deviation between room temperature and reference temperature, the percentage of the calculated set flow temperature set here is added to the set flow temperature or subtracted from it up to the min. or max. values set under the protective functions.

Example: Reference room temp.: 25 °C; room temp.: 20 °C = 5 °C deviation. Calculated reference flow temp.: 40 °C: room controller: 10 % = 4 °C 5 X 4 °C = 20 °C. Accordingly, 20 °C are added to the reference flow temperature, giving 60 °C. If the value is higher than the one set in "Max. flow temp", the resulting temperature will be the one set in "Max. flow temp".

Under "5....2. Thermostat" further °CALEONs can be set optionally as room controllers. The same system as for the first room controller applies.


5. Settings -> 5.1. Heating circuit 1 -> 5.15. Heating circuit off

If you want the heating circuit to switch off in addition to summer-winter shutdown, even if the room temperature is reached, set "summer + room" here.



The RC21 is suited for low voltage only!

Display and Input

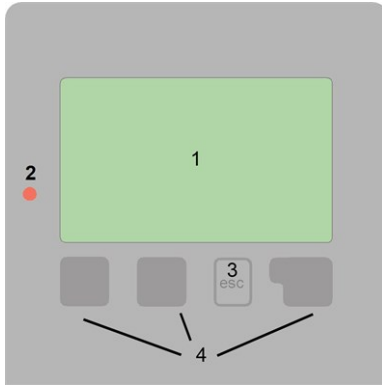

Further symbols can be found in the special functions


Examples for key settings:

+/-	Increase / decrease values
▼/▲	Scroll menu down / up
Yes/No	agree / reject
About	further information
Back	to the previous display
Ok	Confirm selection
Confirm	Confirm setting

The display's (1), extensive text and graphical mode, enables simple, almost self-explanatory, operation of the controller.

The LED (2) lights up green when the primary pump is switched on (automatic mode). The LED (2) lights up red when operating mode ,Off' is set. The LED (2) flashes quickly red when an error is present.

The function of the other 3 keys (4) is shown in the display right above the keys. The right-hand key generally has a confirmation and selection function.

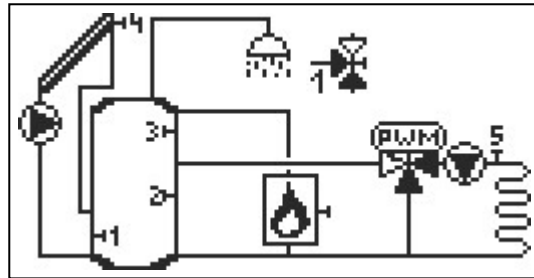

The graphics mode appears if not key is pressed for 2 minutes or after exiting the main menu with 'esc'.

HC	Day
Tg	36.0°C
Flow	0.0°C
Outdoor	6.0°C
Buffer	35.0°C
DHW	45.0°C

The temperature overview appears when you press the. left button. Tapping the button again leads back to The graphic overview.

Exit main menu	
1.Measurements	
2.Statistics	
▲	▼ OK

Hitting the "esc" key in the graphics mode takes you directly to the main menu.

Commissioning help

Setup wizard

Would you like to start the setup wizard?

no

yes

1. Set language and time
2. Commissioning help / setup wizard
 - a) select or
 - b) skip.

The setup wizard guides through the necessary basic settings in the correct order. Every parameter is explained on the display of the controller. Pressing the „esc“ key takes you back to the previous setting.

b) With free commissioning the settings should be made in the following order:

- menu 10. Language
- menu 3. Time, Date and Operating Times.
- Menu 5. Settings, all values
- menu 6. Protection Functions (if any adjustments necessary).
- menu 7. Special Functions (if any adjustments necessary).

3. In menu operating mode "4.1. Manual", test the witch outputs with the consumers connected and check the sensor values for plausibility. Then set to automatic mode. See " Manual " on page 32



The setup wizard can be accessed in menu 7.2 at any time.



Consider the explanations for the individual parameters on the following pages and check if further settings are necessary for your application.

1. Measurement values

Exit measurements

1.1.51 Solar storage	25.0°C
1.2.52 Buffer sensor	35.0°C

▲

▼

Serve to display the current measured temperatures.



If „error“ appears on the display instead of the measurement value, there may be a defective or incorrect temperature sensor.



If the cables are too long or the sensors are not well-placed, small deviations in the measurement values may occur. In this case, the display values can be compensated by adjustments in the controller See " Sensor Calibration " on page 42. The selected program, connected sensors and the specific model design determine which measurement values are displayed.

2. Statistics



Serve for function control and long-term monitoring of the system.



For time-dependent functions such as circulation and anti-legionella and the evaluation of system data, it is essential that the time is accurately set on the controller. Please note that the clock continues to run for about 24 hours if the mains voltage is interrupted, and afterward must be reset. Improper operation or an incorrect time may result in data being cleared, recorded incorrectly or overwritten. The manufacturer accepts no liability for the recorded data!

Today

Flow temperature of the last 24 hours

In the graphical overview the characteristics of the flow for the present day is shown from 0 ... 24 h. The right button changes the unit of time (days) and the two left buttons scroll through the diagram.

28 days

Flow temperature during the last 28 days

In the graphical overview the characteristics of the flow temperature during the last 28 days is shown. The right button changes the unit of time (days) and the two left buttons scroll through the diagram.

Operating hours

Here the operating hours of the heating circuit and other switch or signal outputs are displayed. This is the entire time the heating circuit pump and other switch or signal outputs were active. The displayed date in this menu is the date of the last deletion. From this date on the current count is added.

Heat quantity

Display of the consumed heat quantity from the system in kWh.



This is an indicative value.

Graphic overview

This results in a clear illustration of the data as a bar graph. Different time ranges are available for comparison. You can page through with the two left keys.


Notifications

Display of the last 20 errors in the system with indication of date and time.

Reset / Clear

Resetting and clearing the selected statistics. Selecting 'all statistics' clears everything except the messages.

3. Periods

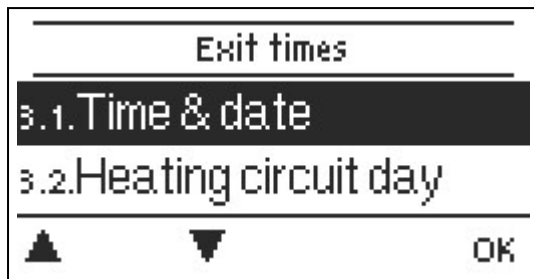

Settings for time, date and operating times for the heating circuit.



The associated temperature reference values are specified in Menu 5, 'Settings'.

Time & Date

Serve to set the current time and date.



For time-dependent functions such as circulation and anti-legionella and the evaluation of system data, it is essential that the time is accurately set on the controller. Please note that the clock continues to run for about 24 hours if the mains voltage is interrupted, and afterward must be reset. Improper operation or an incorrect time may result in data being cleared, recorded incorrectly or overwritten. The manufacturer accepts no liability for the recorded data!

Daylight saving time

If this function is activated, the controller automatically changes to winter time or summer time (DST, Daylight Savings Time).

Heating Circuit (Day)

This menu is used to select the daytime mode times for the heating circuit; three time periods can be specified for each weekday and copied to the following days.



Unspecified times are automatically considered to be night-time mode. The set times are only taken into account in the 'Automatic' heating circuit operating mode.

Heating Circuit Comfort

This menu can be used to select three time ranges for each day of the week in which the heating circuit is supplied with an increased comfort temperature, e.g. for quick heating in the morning.

DHW enable

In this menu, the approval times for the DHW load (sensor S3) are selected, whereby for every weekday 3 periods can be determined and copied in the following days.




In times that are not filled, the DHW load is automatically shut down by the controller.

DHW comfort

This menu can be used to select three time ranges for each day of the week in which the DHW is supplied with an increased comfort temperature.

4. Operating mode

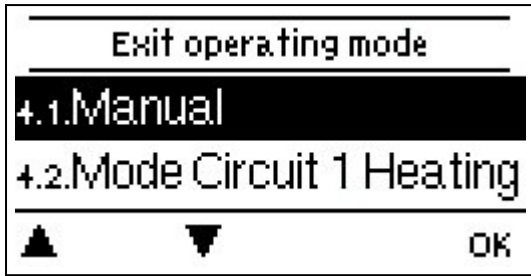

To specify the operating modes for the heating circuit. After an interruption of the mains voltage, the controller automatically returns to the last operating mode selected.



Only in automatic mode does the controller use the set operating times and the correspondingly set target flow temperatures!

Manual

The individual relay outputs, v outputs and the connected consumers can be checked for proper functioning and correct assignment.



The operating mode 'Manual' may only be used by specialists for brief function tests, e.g. during commissioning! Function in manual mode: The relays and thus the connected consumers are switched on and off by pressing a key, with no regard to the current temperatures and set parameters. At the same time, the current measurement values of temperature sensors are also shown in the display for the purposes of function control.

Mode Circuit (X)

Sets the heating circuit mode.

Off

"Off" switches off the heating circuit completely. The heating circuit is only switched on again by changing the operating mode directly on the controller or via the optional internet application "SOREL Connect".

Changes to room controllers in "off" mode have no influence on the heating circuit operation.

Heating

"Heating" switches the heating circuit to normal heating mode.


Changes to room controllers or via "SOREL Connect" affect the heating circuit operation.

Cooling

If the heating circuit is in "Heating and Cooling" Mode (5. Settings -> 5.1. Heating Circuit 1 -> Operating Mode), manual seasonal change of the heating circuit can be effected by selecting the mode "Cooling".

Changes to room controllers or via "SOREL Connect" affect the heating circuit operation.

5. Settings

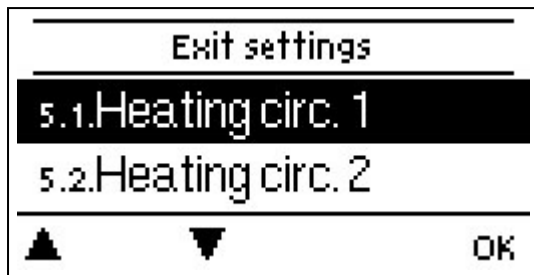

The basic settings for the control function of the heating circuit are applied.
Basic settings applied.



By no means does the controller replace the safety appliances on site!

Heating Circuit (X)



Operating mode

Heating: automatic/normal operation taking into account operating times (day, comfort increase, night reduction).

Reference: fixed flow temperature independent of the outside temperature. The desired flow temperature must be set in Menu 5.1.5.

Reference program: e.g. for screed heating. For the next 14 days, can be found under Menu 4. different fixed flow temperatures can be entered. After 14 days, the reference temperature of the 14th day is used continuously until the operating mode is changed. Different temperature values can be set in menu 5.4. for every individual day separately.



Set room controllers have no influence on the setpoint program!

Heating and cooling: automatic/normal operation taking into account operating times (day, comfort increase, night decrease) with change of season.

The operating mode can be changed from heating to cooling in different ways:

1. Switching via °CALEON Clima room controller
 - a. Configuration "See " °CALEON Room Controllers " on page 24"
 - b. Main menu °CALEON Clima room controller
2. Using a sensor input for the change of season (e.g. by signal of an invertible heat pump or via an external switch). The sensor input is monitored for short circuit (closed= cooling, open = heating).
 - a. menu 5. Settings -> Heating Circuit (X) -> Room Contr. heating circ. (X) -> Thermostat -> Sensor Input (e.g., S1)
 - b. Menu 5. Settings -> Heating Circuit (X) -> Thermostat -> Sensor Type -> Season
3. Manual switchover on the controller:
 - a. Menu 4. Operating Mode -> Mode Heating Circuit (X) -> Heating/Cooling

Cooling: automatic cooling operation taking into account operating times (day, comfort increase, night reduction).



The ideal addition to your cooling system is a °CALEON Clima room controller (room temperature measurement, relative humidity measurement, dew point monitoring, simple seasonal change, and many more).



The following functions can be helpful when using the cooling function:

- Dew point correction
- Min. Flow cooling
- Max. flow cooling
- Cooling valve heating circuit 1/ heating circuit 2
- Free Cooling
- Season switch
- Compressor -> Cooling Request
- Dehumidifier

Season switch

Only appears, if "heating and cooling" mode is selected. Heating circuits separately, or switching system-wide between heating and cooling.

S/W Day

Summer / Winter changeover in daytime mode

If this value is exceeded at the outdoor sensor the controller automatically switches the heating circuit off = Summer mode. If the outdoor temperature drops below this value, the heating circuit is switched on again = Winter mode.

! In addition to the operating times in normal daytime operation, this setting is also valid for times with activated comfort.

S/W Night

Summer/Winter changeover in night-time mode

If this value is exceeded at outdoor sensor S1 during the nighttime mode times, the controller automatically switches the heating circuit off = Summer mode. If the outdoor temperature drops below this value, the heating circuit is switched on again = Winter mode.

Curve

Type and slope of the heating characteristic curve


The characteristic curve is used to control the heat dissipation of the heating circuit relative to the outdoor temperature. The demand for heat differs due to factors such as the type of building, heating, insulation and outdoor temperature. For this reason, the controller can operate with a normal straight curve (setting ,simple') or split curve (setting ,split').

If ,simple' is selected, the curve is adjusted using the graphic diagram. While setting the slope, the controller also shows the slope value and the calculated target flow temperature at -12 °C as a reference point.

If ,split is selected, the curve is set in the following steps:

1. Outdoor temperature for slope change
2. Slope over outdoor temperature for change
3. Slope below outdoor temperature for change

While setting the slope, the controller also shows the slope value and the calculated target flow temperature at -12 °C as a reference point. In case of repeated adjustment of the split curve, the settings appear in reverse order.

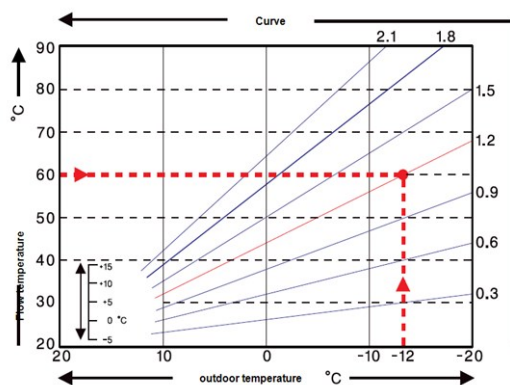

The diagram shows the influence of the selected characteristic curve steepness (standard curve) on the calculated reference flow temperature of the heating unit. The correct characteristic curve is determined by defining the intersection point of the maximal calculated flow temperature (=design temperature) at minimal outdoor temperature.

Example: The design temperature of the heater 60 °C flow at lowest outdoor temperature according to calculation of heat requirement -12 °C. The intersection point renders a slope of 1.2 as the setting.

Day Correction

Parallel characteristic translation

The day correction causes a parallel shift of the heating curve during daytime operating hours, because with certain outdoor temperatures the building might not be optimally heated with the set heating curve. With a non-optimised heating curve, the following situations frequently occur: hot weather = room too cold/cold weather = room too hot. In this case, the slope of the curve should be reduced stepwise by 0.2 points and increases the day correction by 2 ... 4 °C each.

Night Correction

Parallel characteristic translation

The night correction produces a parallel translation of the heating characteristic during the nighttime operating hours. If a negative value is set for the night correction, the reference flow temperature is lowered accordingly during the nighttime operating hours. In this manner, primarily

at night, but also during the day when no-one is at home, the room temperature is lowered, thus saving energy. Example: A day correction of +5 °C and a night correction of -2 °C produces a reference flow temperature in nighttime operation that is 7 °C lower.

Comfort Temperature Boost

Parallel characteristic translation

The comfort temperature boost is added to the set day correction. In this manner it is possible to carry out quick heating and/or raise the temperature of living spaces at a certain time each day.

Min. Flow

The minimum flow temperature is the lower limit of the heating curve, and by this, the reference flow temperature of the heating circuit. In addition to that, the minimal flow temperature is the reference flow temperature for the frost protection function.

Max. Flow

This value is the upper limit of the reference flow temperature of the heating circuit. If however, the temperature of the heating circuit exceeds the set value, the heat circuit shuts down until the temperature falls below this value. After 55 seconds, rinse for 5 seconds.



The customer must provide an additional limiting thermostat which is connected to the pumps in series (eg underfloor heating) for safety.

Reference/Actual -

Switch on hysteresis for additional heating

This setting determines the allowed undershoot of the heating circuit temperature below the calculated reference flow temperature. If the heating circuit flow temperature and the storage temperature drop below the reference flow temperature by this value, the additional heating will start the additional heat source after a 1 minute delay.



Heat request is started when the flow temperature is continuously below reference temperature for 1 minute.

Reference/Actual +

This value determines the acceptable underflow of the heating circuit temperature beyond the calculated reference flow temperature at the buffer sensor or flow sensor. If the temperature at the buffer sensor exceeds the reference flow temperature by the value set here, the heating request is deactivated.



The setting value reference/actual + appears only in the menu if a sensor has been set under buffer sensor.

Variant

Only appears, if the heating circuit is an unmixed heating circuit (no mixer 1).

The condition for switching off the heating circuit pump is set. In the mode flow (FL), the pump is shut down, if the reference temperature is exceeded. In the summer/winter mode (SW), it is shut down in the winter mode at T_{max}, in the summer mode the heating circuit pump is shut down in general.



The sensor should be placed in the return line in the VL mode.

Heating circuit off

If you use a room controller, the heating circuit can also be switched off on the base of the room controller in addition to the switch-off according to outside temperature.

Summer: Heating circuit turns off when the summer/winter time changeover (outside temperature) is exceeded.

Summer + Room: Heating circuit is turned off as soon as the summer/winter time changeover (outside temperature) or the room setpoint temperatures are exceeded.

Room hysteresis

Only appears, if "Switch off heating circuit" has been set to "Summer+Room". If the reference room temperature + the hysteresis set here are exceeded, the heating circuit is switched off.

In cooling mode, reactivation when the room temperature is exceeded.

Buffer sensor

Input of heating circuit buffer sensor.

In this menu, the sensor is set, which is used as a reference sensor for the heating circuit request. Switching on and off conditions for a heating circuit request See " Reference/Actual - " on page 35 / See " Reference/Actual + " on page 35.



The request only works if an energy source (burner, compressor, solid chamber) is activated as an additional function and if this source is set for the heating circuit request

(see also

Thermostat: See " Heating Circuit request " on page 50,

Burner: See " Heating Circuit request " on page 54,

Compressor: See " HC request " on page 55,

Heater: See " HC request " on page 50).

Insulation factor

Depending on the selected factor, the outdoor temperature has an influence on the VL temperature calculation after the set delay.

0= Off, 1= 15 minutes, 2= 60 minutes, 3= 120 minutes, 4= 300 minutes



Better insulated buildings can increase comfort and save energy by increasing the building factor.

Overload protection

If the function is set to "On", it does not matter which state the heating circuit has. If the temperature at the buffer sensor is above Max. buffer, the heating circuit pump switches on and the setpoint flow rate is fixed to See " Max. Flow " on page 35 -2°C or the adjusted set point. If the set Max. If the temperature of the buffer falls below 5 Kelvin, the heating circuit switches back to the previous mode.

Min. Flow cooling

Only appears when the operating mode of the heating circuit is set to heating and cooling or cooling.

This value is the upper limit of the reference flow temperature of the cooling.

Max. flow cooling

Only appears when the operating mode of the heating circuit is set to heating and cooling or cooling.

This value is the upper limit of the reference flow temperature of the cooling.

Dew Point protection

Only appears, if the operating mode of the heating circuit is set to heating and cooling or cooling.

Is only active, if humidity is measured (e.g. via a °CALEON Clima room controller). It is calculated from which room temperature there is unwanted condensation (precipitation) for the currently measured humidity. Dew point monitoring automatically shifts the target supply temperature in cooling mode to prevent mould formation.

Dew point correction

Only appears, if the operating mode of the heating circuit is set to heating and cooling or cooling. This value moves the internal dew point characteristic by up to 10 °C in parallel.

Example 1: You determine that there is condensation with the default value, so you increase this correction value.

Example 2: Condensation/precipitation can be ignored, but stronger cooling is required instead. You therefore decrease this correction value.



In case of reduction of the calculated temperature with the help of dew point correction condensation / perspiration / precipitation can occur, which, among other things, may cause the formation of mold.

Room Controller Heating Circuit (X)

Here, the settings are made for an optional room controller. The following variants can be used with different functions:

°CALEON Room Controller:


Influence of the room temperature, the room reference temperature as well as of room-specific time programs on the reference flow. Operating modes of the °CALEON and significance for the HCC:

Off = Heating Circuit Off,


Eco = Reference - Night reduction,

Normal = Reference + daily correction,

Comfort = Reference + daily correction + comfort increase

 The selection of an operating mode (Normal, Comfort, Eco or Off) is only valid until a change to another mode is effected in the time program of the °CALEON.

Example: The operating mode "Off" is activated on the °CALEON. The next change in the time program ends the manually set operating mode and activates the mode set according to the time program. If a longer shutdown of the heating circuit is desired, for example, the holiday mode can be used in the °CALEON.

 If several °CALEONs are set as room controllers, the operating mode of the HCC is determined by the room with the greatest energy demand.


RC21:

Influence of the room temperature on the reference, parallel shift of the characteristic curve by the control dial, influence on the reference flow by the operating mode switch. Operating modes of the RC21 (Switch) and significance for the HCC:

Auto = Set reference,


Day = Reference + daily correction,

Night = Reference night reduction

 For detailed instructions on how to connect °CALEON or an RC21, See " °CALEON Room Controllers " on page 24

Sensor input (S1-S6, VT1, VT2):

Use of a sensor input as room controller with different functions (see "Sensor Type").

 Set room controllers have no influence on the setpoint program!

Thermostat (X)

The room controller or sensor input is selected here.

When using a °CALEON: select the room set in the °CALEON.

When using an RC21: select RC21-Local 1 and then select RC 1 Temp. 1 and RC1 Contr. sensor inputs used - See " RC21 Room thermostat with remote control " on page 26.

When using an RC20 or other thermostats and seasonal switches: select the sensor input used here and then select the exact function under "sensor type".

Sensor Type

If a sensor input is selected for "Thermostat (X)", it must be set here how exactly this input is to be used.

RC20: measurement of room temperature and influence on reference

Contact: Open = heating circuit Off, closed = heating circuit

Season: Closed= cooling, Open = heating

RC 1 Temp. 1

Only appears, if an RC21 has been set in "Thermostat (X)".

Select here the sensor input that you use for the temperature sensor (Terminal 1) of the RC21.

RC 1 contr.

Only appears, if an RC21 has been set in "Thermostat (X)".

Select here the sensor input that you use for the remote control (Terminal 2) of the RC21.

Room Controller

This value is used to appoint the amount of influence the room temperature has on the reference flow temperature, as a percentage. For each degree deviation between room temperature and set point temperature, the percentage set here is added from the calculated set flow temperature to the set flow temperature or subtracted from it until the min. or max flow values.

Example: Reference room temp.: e.g. 25 °C; room temp.: e.g. 20 °C ±5 °C. Calculated reference temp.: e.g. 40 °C: room controller: 10 % = 4 °C $5 \times 4 \text{ °C} = 20 \text{ °C}$. Accordingly, 20 °C are added to the reference flow temperature, giving 60 °C. If the value is higher than the one set in max. flow temp, the resulting temperature is the one set in max. flow temp.

Room Reference Day

The desired room temperature for day mode.

In combination with the %-value set under "room controller", the difference between reference and actual room temperature influences the reference flow temperature. If the room controller is set to 0 %, this function is deactivated.



For °CALEON room controller without influence.

Room Reference Night

The desired room temperature for night mode.

In combination with the %-value set under "room controller", the difference between reference and actual room temperature influences the reference flow temperature. If the room controller is set to 0 %, this function is deactivated.



For °CALEON room controller without influence.



In the mode Set point program, the room controller has no influence.

Smart grid 1/ PV contact

A sensor input can be set here, which can be used as Smart grid terminal 1 for interference by the energy supplier or as a PV contact for a photovoltaic system. This sensor is observed to "short circuit" (PV-Contact closed). If the PV-Contact is closed, the mode of this function is changed to "comfort" and operated at the comfort temperature set for the comfort function. This also applies in the case that the mode "comfort" of the function currently has no time release.



Information about the operation and the connection of PV-contact, refer to the technical description of your PV system.

Smart grid 2

Smart Grid Terminal 2 for influence by the energy supplier. The inputs are checked for open and short-circuit. The combination of inputs 1 and 2 determines how the heating circuit is influenced: 1= short-circuit, 0 = open Terminal 1: Terminal 2

0:0 = Set heating circuit modes to "Off".

1:0 = Set heating circuit modes to "Eco"

0:1 = Set heating circuit mode according to time and room controller settings

1:1= Set heating circuit mode to "Comfort" mode

Settings Domestic Hot Water (DHW)



By no means does the controller replace the safety appliances on site!

Operating mode


The DHW heating can be set here. "Auto" activates the DHW heating according to the time program, with "off" the DHW heating is turned off.

Hot water minimum

Minimum DHW temperature. If the set temperature at the DHW sensor is undershot outside of the set times, the DHW charge and heat request will be turned on.

DHW reference

Minimum DHW temperature time program. If the set temperature at the DHW sensor is undershot and the DHW charge is approved for the time, the DHW charge and the heat request will be turned on.

 The request only works if an energy source (burner, compressor, solid chamber) is activated as an additional function and if this source is set for the DHW request.

DHW comfort

DHW temperature for comfort time. The set temperature considered as minimum temperature during the set comfort time. If the temperature on DHW-sensor is below the value set here is during the DHW comfort periods, the DHW heating is started, until DHW comfort + hysteresis is achieved.

DHW hysteresis

DHW hysteresis. The DHW charge and heat request are shut down if the temperature at the DHW sensor reaches the value set under "See " Hot water minimum " on page 38" / "See " DHW reference " on page 38" plus the heating set here.

Buffer DHW load

DHW load from the buffer. The DHW load from the buffer storage is turned on if the temperature on the buffer sensor is at least 8 °C warmer than at the DHW sensor. The DHW load from the buffer storage is shut down if the temperature at the buffer sensor is only 4 °C warmer than at the DHW sensor or if the temperature at the DHW sensor has reached the value set under See " Hot water minimum " on page 38 or See " DHW reference " on page 38.

DHW priority


Preferred DHW charge. If this function is activated, the reference flow temperature during a DHW heating will be set to the minimum flow temperature See " Min. Flow " on page 35 so that the mixer moves to the "closed" position.

DHW sensor

The sensor used as a domestic hot water sensor.

Smart grid 1/ PV contact

A sensor input can be set here, which can be used as Smart grid terminal 1 for interference by the energy supplier or as a PV contact for a photovoltaic system. This sensor is observed to "short circuit" (PV-Contact closed). If the PV-Contact is closed, the mode of this function is changed to "comfort" and operated at the comfort temperature set for the comfort function. This also applies in the case that the mode "comfort" of the function currently has no time release.

 Information about the operation and the connection of PV-contact, refer to the technical description of your PV system.

6. Protective Functions



The 'Protective functions' can be used by specialists to activate and set various protective functions.




By no means does the controller replace the safety appliances on site!

Seizing Protection

If the anti-seizing protection is activated (daily, weekly, off), the controller switches the outputs on/off at 12:00 noon for 5 seconds to prevent seizing of the pump/valve after long periods of inactivity.

Frost Protection

If the external temperature on sensor S1 goes below 1 °C and the heating circuit is turned off, the heating circuit will automatically be turned on if the frost protection is activated and the reference flow temperature is set at the minimum flow temperature set under See " Min. Flow " on page 35. As soon as the outdoor temperature exceeds 1 °C, the heat circuit is switched off again.

 Switching the frost protection function off or setting the minimum flow temperature too low can lead to severe damage to the system.

Discharge Protection

With activated buffer discharge protection, the heating circuit is switched off as soon as the buffer temperature undershoots the min. flow temperature. flow temperature. Every 5 minutes, the system checks if the flow temperature has been reached.

Dew point correction

Activate or deactivate. Activated dew point correction corrects the heating circuit flow temperature in cooling mode and switches off the heating circuit when the temperature falls below the dew point in order to prevent condensation.

Pressure Monitoring

In this menu, the system pressure monitoring can be activated through a direct sensor. A message is displayed and the LED flashes red when the pressure drops below minimum or exceeds the maximum.

RPS1 / RPS2

In this menu, you can adjust which pressure sensor model is being used. Please note: If e.g. VFS1 is connected, RPS1 will be hidden

RPS Min

Minimum pressure. If this pressure is not met, the controller emits an error notification and the red LED flashes.

RPS Max

Maximum pressure in the system. If this pressure is exceeded, the controller emits an error message and the red LED flashes.

Protective functions for Solar



The protection functions for Solar are not displayed in the "Protective functions" menu, but rather as a sub-menu in the settings from the solar function, See "Solar" on page 52.

System protection

Priority protection function

The system protection should prevent an overheating of the components installed in the system through the forced shut down of the solar circulation pump. If the value "AS Ton" on the collector has been exceeded for 1 Min. the pump will be turned off and not turn on again in order to protect the collector, for example, from steam. The pump will only be switched on again, when the collector temperature falls below "SP Toff".



With the system protection (on), there are increased standstill temperatures in the solar collector and therefore an increased pressure in the system. The operating manuals from the system components must be observed.

Collector protection

Priority protection function

The collector protection prevents the collector from overheating. A forced switching of the pump makes sure that the collector is cooled through the storage. If the value "KS Ton" is exceeded on the collector, the pump will be turned on in order to cool the collector. The pump is shut down if the value "KS Toff" on the collector is not met or the value "KS Tmax Sp." on the storage is exceeded.



System protection has priority over collector protection! Even if the switch requirements for the collector protection are present, the solar circulation pump is turned off once "AS T on" is reached. Normally the values from the system protection (depending on the maximum temperature of the storage or other components) are higher than the collector protection.

Recooling


In the system hydraulics with solar, excess energy is guided from the storage back to the collector with an activated return cooling function. This only occurs if the temperature in the storage is greater than the value "Return cooling Tref" and the collector is at least 20 °C colder than the storage and until the storage temperature has fallen below the value "Return cooling Tref". For multi-storage systems, the return cooling applies to all storage.



Energy is lost through the collector through this function! The recooling should only be activated in cases of exception, with low heat acceptance, for example, during vacation.

Frost Protection


A 2-level frost protection function can be activated. In level 1, the controller turns on the pump every hour for 1 minute if the collector temperature is below the set value "Frost Level 1". If the collector temperature continues to decrease to the set value "Frost Level 2", the controller will turn on the pump without disruption. If the collector temperature exceeds the value "Frost level 2" by 2 °C, the pump will turn off again.

 Energy is lost through the collector through this function! It is normally not activated for solar systems with antifreeze. The operating manuals from the other system components must be observed.

Collector alarm

If this temperature at the collector sensor is exceeded when the solar pump is turned on, a warning or error notification is triggered. There is a corresponding warning in the display.

7. Special Functions

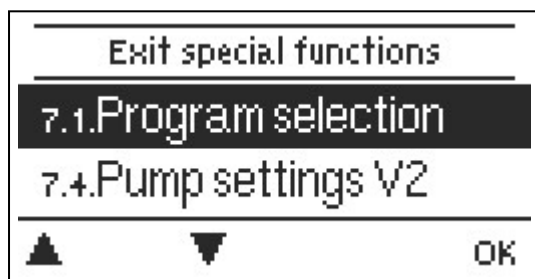


Used to set basic items and expanded functions.



The settings in this menu should only be changed by a specialist.


Program selection

Here the hydraulic variation fitting to the respective use case is selected and set.

 The program selection normally occurs only once during the first entry into service by a specialist. An incorrect program selection may lead to unpredictable errors.

Pump settings V(X)

Settings from the 0-10V or the PWM pump can be made in this menu.

 When this menu is selected, you may receive a request to save the speed settings.

Signal type

Only available, if the function is used on one of the V-outputs. The type of device to be controlled is set here.

0-10V: Control by 0-10V signal.

PWM: Control by means of a PWM signal.

Profile

In this menu, the preset profiles for actuators can be selected or under "manual" all settings can be done personally. The settings can still be changed after a profile has been selected.

Output Signal

In this menu the type of actors are set: heating pumps have the greatest output with a small input signal, solar pumps in contrast have very little output with a small input signal. Solar = normal, heating = inverted.

PWM / 0-10V off

This signal / this voltage is emitted if the actor is turned off (actor with cable break detection require a minimum voltage / a minimum signal).

PWM / 0-10V on

This voltage / this signal requires the pump in order to turn on and to run at a minimum speed.

PWM / 0-10V max.

With this value, the maximum signal / maximum voltage level can be specified for the highest speed of the energy saving valve, which is used, for example, during the purging or manual operation.

Show signal

Represents the set signal in a graphic and text overview.

Speed control

If the speed control is activated, it LHCC offers the possibility through a special internal electronic system to change the speed of pumps depending on the process. The PWM and 0-10V outputs can work speed-controlled.

Variant

The following speed variants are available here:

Off: There is no speed regulation. The connected pump is only turned on or off with full speed.

Mode M1: The controller changes to the set max. speed after the purging time. If the temperature difference ΔT between the reference sensors is below the set switch on temperature difference $\Delta T R1$, the speed will be reduced. If the temperature difference between the reference sensors is above the set switch on temperature difference $\Delta T R1$, the speed will be increased. If the controller has decreased the speed of the pump to the smallest level and the ΔT between the reference sensors is still only ΔT_{off} , the pump will be turned off.

Mode M2: The controller changes to the set min. speed after the Speed. If the temperature difference ΔT between the reference sensors is above the set switch on temperature difference $\Delta T R1$, the speed will be increased. If the temperature difference ΔT between the reference sensors is below the set switch on temperature difference $\Delta T R1$, the speed will be reduced. If the controller has decreased the speed of the pump to the smallest level and the ΔT between the reference sensors is still only ΔT_{off} , the pump will be turned off.

Mode M3: The controller changes to the set min. speed after the Speed. If the temperature on the reference sensors is above the set value to be set in the following, the speed will be increased. If the temperature on the reference sensors is below the set value to be set in the following, the speed will be reduced.

Purging time


For this time, the pump runs with its full speed (100%) in order to guarantee a secure start-up. Only after expiration of this purging time will the pump have a controlled speed and will switch, depending on the set variant, to the max. or min. speed. Speed.

Sweep time

With the control time, the inertia of the speed control is determined in order to prevent strong temperature deviations as much as possible. The timespan is entered here, which is needed for a complete cycle from minimum speed to maximum speed.


Max. Speed

The maximum speed of the pump is determined here in %. During the setting, the pump runs in the respective speed and the flow can be determined.

 The specified percentages are variables, which may deviate more or less strongly depending on the system, pump and pump level. 100% is the maximum possible power of the controller.

Min. Speed

The minimum speed of the pump is determined here. During the setting, the pump runs in the respective speed and the flow can be determined.


 The specified percentages are variables, which may deviate more or less strongly depending on the system, pump and pump level. 100% is the maximum possible power of the controller.

Setpoint

This value is the control setpoint. If this value is below at the sensor, the speed is reduced. When it is exceeded, the speed is increased.

Sensor Calibration


Deviations in the temperature values displayed, for example. due to cables which are too long or sensors which are not positioned optimally can be compensated for manually here. The settings can be made for each individual sensor in steps of 0.5 °C.

 Settings are only necessary in special cases at the time of initial commissioning by the specialist. Incorrect measurement values

can lead to unpredictable errors.

Relay functions

Free relays, i.e. relays not used in a basic scheme, can be assigned to various additional functions. Every additional function can only be assigned once. Preset functions can be deselected. See "Function overview" on page 47

 When assigning relays with functions, the activated function for already used relays must first be deactivated before a new function can be selected.

R1 to R3: mechanical relay 230V

R1 to R4: mechanical relay 230V

V1 and V2: PWM and 0-10 V outputs See "External relay at signal output V(X) (0-10V / PWM)" on page 13

Please pay special attention to the relay's technical information (see "Specifications").


The symbols shown here are displayed on the main overview screen when the special function is activated.

Heat quantity

Constant flow

If "Constant flow" is activated as the type of heat quantity metering, the approximate heat from the manually entered values for antifreeze, its concentration and the flow from the system and the measured sensor values from the collector and storage are calculated. Additional information about antifreeze, its concentration and the flow of the system is required. Additionally through the setting offset ΔT , a correction factor can be set for the heat quantity collection. Since the collector temperature and the storage temperature can be used for the heat quantity metering, depending on the system, there may be deviations from the displayed collected temperature to the actual previous temperature or the displayed storage temperature to the actual return temperature. Through the setting Offset ΔT , this deviation can be corrected.

Example: displayed collector temperature 40°C, read previous temperature 39°C, displayed storage temperature 30°C, read return temperature 31° means a setting of -20% (displayed ΔT 10K, actual ΔT 8K => -20% correction value)

 The heat quantity data in the "Constant flow" mode only consists of calculated values for the functional inspection of the system.

Flow temperature sensor (X)

In this menu, it is set which sensor is used to measure the flow temperature.

Return flow sensor

In this menu, you can set which sensor is used to measure the return flow temperature.

Glycol type

In this menu, the antifreeze used is set. If none is used, please set glycol proportion to 0.

Glycol percentage

The percentage of antifreeze in the medium.

Flow rate supply flow (X)

Nominal system flow.

The flow of the system in liters per minute, which is used as calculation basis for heat metering.

Offset ΔT

Correction factor for the temperature difference for heat metering

Since the collector temperature and the storage temperature can be used for the heat quantity metering, depending on the system, there may be deviations from the displayed collected temperature to the actual previous temperature or the displayed storage temperature to the actual return temperature. This deviation can be corrected with the adjustment value Offset ΔT

Example: displayed collector temperature 40°C, read previous temperature 39°C, displayed storage temperature 30°C, read return temperature 31° means a setting of -20% (displayed ΔT 10K, actual ΔT 8K => -20% correction value)

VFS (X)

The type used of direct sensor is set in this menu.

VFS - Position

This menu is used to set whether the direct sensor was mounted in supply or return flow.



To prevent damage to the Vortex Flow sensor it is highly recommended to place it in the return flow. If contrary to this recommendation it is used in the supply line, the maximum temperature has to be considered. (0 ° C to 100 ° C continuous operation and short term -25 ° C to 120 ° C)

Reference sensor

The sensor to be used for heat metering is set here.

Commissioning

Starting commissioning help guides you in the correct order through the basic settings necessary for commissioning, and provides brief descriptions of each parameter in the display. Pressing the ,esc' key takes you back to the previous value so you can look at the selected setting again or adjust it if desired. Pressing ,esc' more than once takes you back to the selection mode, thus cancelling the commissioning help (See " Commissioning help " on page 29).



May only be started by a specialist during commissioning! Observe the explanations for the individual parameters in these instructions, and check whether further settings are necessary for your application.

Factory Settings

All settings can be reset, returning the controller to its delivery state.



All of the controller's parametrization, statistics, etc. will be lost irrevocably. The controller must then be commissioned once again.

Eco Display Mode

In Eco Display Mode the backlight of the display is switched off if no buttons are pushed for 2 minutes.



If a message exists, the backlight does not switch off until the message has been scanned by the user.

Network

If necessary, the network settings of the connected data logger must be set.

Access Control

This menu lets you give up to 4 users access to the data logger. The users that are registered then have access to the controller or respectively the data logger.

To add a user in the list, select <add user>. Leave the now visible menu open und connect to the address of the connector or respectively the data logger. Your user name is going to appear in this menu and can be selected and confirmed with 'OK'.

Note

You can find the address of the connector or respectively the data logger on the address sticker on the outside of the casing. Pointers and help on how to establish a connection you can find in the enclosed SOREL Connect instructions or the instructions of the data logger.

Select a user with ,OK' to grant access.

To revoke access again, choose one of the users from your list and choose <remove user>.

Ethernet

The data logger's Ethernet connection settings can be set using this menu.

MAC Address

Displays the individual MAC address of the data logger.

Auto-Configuration (DHCP)

If auto-configuration is activated, the data logger requests IP addresses and network parameters from a DHCP server that assigns an IP address, subnet mask, gateway IP and DNS server IP. **If you deactivate the auto configuration (DHCP), you will have to make the required network settings manually!**

IP-Address

Please refer to the router configuration for the IP address to be set.

Subnet Mask

Please refer to the router configuration for the subnet mask to be set.

Gateway

Please refer to the router configuration for the gateway to be set.

DNS-Server

Please refer to the router configuration for the DNS server to be set.

Datalogger Version

Shows software version of the datalogger.

CAN bus ID

Here you can see the ID of the controller on the CAN bus.


Sensor send interval

The send interval determines how often the sensor and output values of the controller may be send via CAN. If a value changes, it is sent and starts the interval. The next values are not sent until the interval has expired. If no value changes, nothing is sent.



If there are several controllers in the CAN network, a too short send interval can lead to an overload of the CAN network.

8. Menu Lock

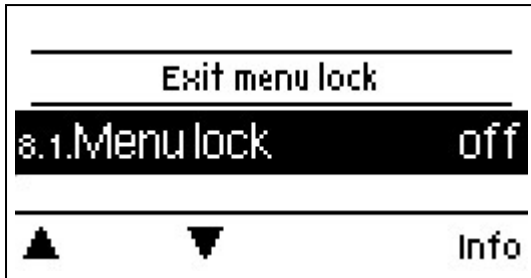

Secure the controller against unintentional changing and compromise of basic functions.

Menu lock active = "On"

Menu lock off = "Off"

In addition, the "Simple" menu view can be used to hide menu items that are not necessary for the daily use of the controller after commissioning. The menu item "Menu lock on/off" is also hidden when the "Simple" menu view is selected!

The menus listed below remain completely accessible despite the menu lock being activated, and can be used to make adjustments if necessary:

1. Measurement values
2. Statistics
4. Settings
6. Special Functions
7. Menu lock
9. Language

9. Service Values



Serve for remote diagnosis by a specialist or the manufacturer in the event of errors, etc.




Enter the values into the table when an error occurs.

10. Language



To select the menu language. During initial commissioning and longer power interruptions, the query is made automatically. The choice of languages may differ depending on the model. Language selection is not available for every model.

Function overview

 When assigning relays with functions, the activated function for already used relays must first be deactivated before a new function can be selected.

Mixer

This menu contains all settings relating to the mixer of the heating circuit.

Direction

Direction of the mixing valve can be set here.

Mixer turn time

The mixer is switched on i.e. is opening or closing for the time span set here, then the temperature is measured to control the flow temperature

Mixer off factor

The calculated pause time of the mixer is multiplied with the value set here. If the pause factor is ,1', the normal pause time is used, ,0.5' will use half the normal pause time. Setting the pause factor to ,4' would quadruple the pause time.

Mixer increase

If the temperature rises very fast, this value is added to the measured flow temperature so that the mixer's reaction is stronger. If the measured temperature does not rise any more, the measured value is used again. The measurement occurs once every minute.

Mixer run time

Mixer-specific setting of the running time required by the mixer for a full ride.

Signal type

Only available, if the function is used on one of the V-outputs. The type of device to be controlled is set here.


0-10V: Control by 0-10V signal.

PWM: Control by means of a PWM signal.

Cooling valve Heating circuit 1/ Heating circuit 2

If the heating circuit is in heating-off, cooling-off, heating-eco, heating-normal or heating-comfort mode, the relay is switched off or switched to the heating circuit buffer.

If the heating circuit is in cooling-Eco, cooling-normal or cooling-Comfort mode, the relay is switched on or the valve switches to the cooling circuit.

 The additional function cooling valve heating circuit 1 / heating circuit 2 is only visible if heating circuit 1 / 2 has been activated on an output.

Heating Circuit 2



See " Heating Circuit (X) " on page 33

Free Cooling

If the function is activated, the output switches a pump or fan and supplies the heating system with "free cooling". This pump supplies e.g. heating circuits whose cooling valve is switched on and must therefore run as soon as cooling is required in at least one heating circuit.

Switch-on condition: a heating circuit is set to Cooling-Eco, Cooling-Normal or Cooling-Turbo.

Switch-off condition: no heating circuit cools.

RFI mixer

The RLA-mixer function (return flow increase mixer) can be used to control a motorized return flow increase for a solid fuel boiler or a return flow buffer/buffer admixture. The RFI mixer requires either 2 relay switch outputs (230) or alternatively may be controlled via a 0-10V / PWM output (PWM mixer).

Operating mode

The RFI mixer can be operated in "SF increase" (solid fuel boiler), "setpoint" or "heating circuit automatic" mode.

SF increase: motorized return flow increase for a solid fuel boiler.

Heating circuit automatic: the setpoint temperature, which is provided by the RFI mixer at the flow sensor, is specified by the heating circuit 1. In addition, a target flow offset can be set.

Setpoint: The setpoint temperature, which is provided by the RFI mixer at the flow sensor, will be set fixed under see "Tsoll".

Reference flow sensor

Sensor for monitoring the reference variable of the RFI function. The mixed temperature of the RFI mixer is measured at this sensor and compared with the current setpoint value. If the flow rate falls below or exceeds this limit, the mixer is controlled or controlled accordingly.

Tref:

Temperature controlled by the mixer.



For operating mode solid fuel boiler

When using a motorised return temperature control for a solid fuel boiler, the minimum temperature of it should not fall below the return (Tref) of the solid fuel boiler. Please refer to the boiler manufacturer's instructions.

Return flow sensor:

Sensor in return

Storage sensor:

Sensor in storage

Direction:

See " Direction " on page 47

Min off time:

Minimum timeout setting of the function

On-time:

See " Mixer turn time " on page 47

Off factor:

See " Mixer off factor " on page 47

Increase:

See " Mixer increase " on page 47

Max one direction:

Maximum cycle time until the mixer is fully clocked on/off.


Signal type

Only available, if the function is used on one of the V-outputs. The type of device to be controlled is set here.

0-10V: Control by 0-10V signal.

PWM: Control by means of a PWM signal.

Difference



The assigned relay is activated as soon as there is a preset temperature difference (ΔT on/off) between the source and target sensors.

ΔT Difference

Switch on - difference:

If this temperature difference is reached, the relay will switch on.

Switch off difference:

If this temperature difference is reached, the relay will switch off.

DF-Source

Heat source sensor/heat supplier for differential function

Adjusts the sensor from the heat source.

Tmin Source

Minimum temperature on the source sensor for approval of the difference relay.

If the temperature on the source sensor is below this value, the difference function will not be switched on.

DF-Drain

Heat decreasing sensor / heat customer for the different functions

Sets the sensor of the heat customer.

Tmax Drain

Maximum temperature on the target sensor for approval of the difference relay.

If the temperature at the target sensor exceeds this value, the difference function will not be turned on.

Heat transfer



With this function, energy from one storage can be loaded in another.

ΔT Heat transfer

Temperature difference for the transfer. If the temperature difference between the sensors ΔT transfer On is reached, the relay is switched on. As soon as the difference on ΔT Transfer off falls, the relay is turned off again.

HT Tmax

Target temperature of the target storage

If this temperature is measured on the sensor in the target storage, the Heat Transfer will be shut down.

HT Tmin

Minimum temperature in the source storage for the approval of the Heat Transfer.

Source

In this menu, the sensor is set, which is placed in the storage from which the energy is extracted.

Drain

In this menu, the sensor is set that is placed in the storage in which it is loaded.


Thermostat



Through the thermostat function, additional energy can be added to the system while being time and temperature controlled. The thermostat function can be used in 2 modes.

"On" = the relay is switched on when all switching conditions are reached

"Inverted" = the relay is switched off when all switching conditions are reached and is otherwise switched on.

 Temperature values which are set too high can lead to scalding or damage to the system. Scalding protection must be provided by the customer!



Other values, for example, Teco, apply in economy mode.

DHW request

Thermostat is started for a DHW - heat request.

Heating Circuit request

Thermostat is started with a heating circuit - heat request.

Tset

The target temperature of the thermostat sensor 1. Below this temperature, the thermostat turns on until Tset+ Hysteresis is reached.

Hysteresis

Hysteresis of set point temperature.

Energy Saving Mode

The Energy Saving Mode switches the heating on when "T Eco on" is undershot and heats up to "T Eco" + hysteresis when solar charge or solid fuel boiler is active.

Delay

Delay for this function.

The function first turns on after this time span if the switch conditions were reached and are still present. This delay is intended to prevent unnecessary switching operations caused by temperature fluctuations or to

Give another energy source time to provide the necessary energy.

Thermostat sensor 1

TH Set is measured at thermostat sensor 1. With a connected thermostat sensor 2, the relay switches on if "TH Ref" at thermostat sensor 1 is undershot and off if "TH Ref" + hysteresis is exceeded at thermostat sensor 2.

Thermostat sensor 2

Optional switch off sensor


If "TH target" + hysteresis is exceeded on thermostat sensor 2, the relay will be shut down.

Thermostat enable

Thermostat activity times

Here the desired periods are set in which the thermostat function is approved. For each weekday, three times can be specified, furthermore, you can copy individual day to other days. The thermostat function is shut down outside of the set times.

Electric heating rod (auxiliary heating)



An electric heating rod that heats up the storage water heater if needed. The heating rod function can be used in 2 modes. "On" = the relay is switched on when all switching conditions are reached.

"Inverted" = the relay is switched off when all switching conditions are reached and is otherwise switched on.



Temperature values which are set too high can lead to scalding or damage to the system. Scalding protection must be provided by the customer!

DHW request

Electric heating rod is started for a DHW - heat request.

HC request

Electric heating rod is started with a heating circuit - heat request.

TH Set

The target temperature of the thermostat sensor 1. Below this temperature, the eat turns on until TH Set + Hysteresis is reached.

Delay

After reaching the switching conditions, the time set here will be waited until the heating rod is actually turned on in order to give another heat source time to heat up.

Hysteresis

Hysteresis of set point temperature.

Eco mode

The Energy Saving Mode switches the heating on when "T Eco on" is undershot and heats up to "T Eco" + hysteresis when solar charge or solid fuel boiler is active.

Sensor 1

TH Reference is measured at the thermostat sensor 1. With a connected thermostat sensor 2, the relay switches on if "TH Ref" at thermostat sensor 1 is undershot and off if "TH Ref" + hysteresis is exceeded at thermostat sensor 2.

Sensor 2

Optional switch off sensor

If "TH target" + hysteresis is exceeded on thermostat sensor 2, the relay will be shut down.

Electric heating rod approval times


Release time for the electric heating rod

Here the desired periods are set in which the electric heating rod is approved. For each weekday, three times can be specified, furthermore, you can copy individual day to other days. The electric heating rod is shut down outside of the set times.

Anti-legionella heating rot

See "Anti Legionella " on page 59.

Dissipation (Cooling)



The **dissipation** function is a simple cooling function.

The relay of this function switches "on" as soon as the set **Tsoll** temperature at the assigned **cooling sensor** is exceeded and the set time **delay** has elapsed.

If the temperature at the cooling sensor reaches **Tsoll hysteresis**, the function switches "off" without a time delay.

Tset

The target temperature at the set sensor for the function cooling (dissipation).


Cooling sensor

The corresponding cooling sensor for the dissipation **function** is set here.

Delay

Switch delay of the heat and cooling request. In order to prevent the heat or cooling request to be activated if there are heat deviations, the corresponding relay is switched up at 5 minutes before the switch conditions occur.

Season switch



1. Mode "Heating" -> output of the season switch is not active
2. Mode "Cooling" -> output of the season switch active

The seasonal switch function switches for change of season (from heating to cooling or vice versa) in combination with the energy request. For example, for inverting a heat pump suitable for reversible operation. If the request for domestic water is activated for the heat pump in the controller, the operating mode of the heat pump automatically switches to the "heating" mode in case of domestic water request, i.e. the output of the seasonal switch is switched off.

Off hysteresis

If the controller has changed the season from cooling to heating and flow < reference flow + Off hysteresis, the seasonal switch will be switched off (output not switched).

Example 1:

Flow = 28 °C; target flow = 30 °C; off-hysteresis = - 3 °C

28 °C < 30 °C - 3 °C -> 28 °C < 27 °C -> wrong! -> Do not switch off the season change

Example 2:

Flow = 28 °C; target flow = 30 °C; off-hysteresis = + 3 °C

28 °C < 30 °C + 3 °C -> 28 °C < 33 °C -> correct! -> Switch off the season change

On hysteresis

If the controller has changed the season from heating to cooling and flow < reference flow + On hysteresis, the seasonal switch will be switched on (output switched).

Cool storage

The storage can be cooled through this function.

Yes: The flow and buffer storage are cooled down to the reference flow temperature + hysteresis.

No: It is cooled down to the reference flow temperature + hysteresis, the temperature in the buffer storage is ignored.

Buffer sensor

If the buffer tank is to be cooled in the cooling mode, the corresponding sensor can be set here.

Solid fuel boiler



In solid-fuel boiler function, a pump is controlled with a assigned relay, which loads the heat energy from a solid-fuel boiler into a storage tank. The solid-fuel boiler function controls the charge pump of a solid-fuel boiler based on the temperature difference between the solid-fuel boiler sensor and the storage tank sensor.

If a control output (V1 or V2, ...) is used with this function, a speed control with a PWM / 0-10V HE pump is possible.

Solid fuel boiler Tmax

Maximum temperature in storage tank. If this is exceeded, the relay is switched off.

Solid fuel boiler Tmin

Minimum temperature in the solid fuel boiler to start the pump.

If the temperature at the solid fuel boiler sensor exceeds the temperature set here, the relay switches on the pump, if the other starting conditions are met.

Below the solids boiler Tmin temperature, the solids boiler function is deactivated.

ΔT Solid fuel boiler

Switch-on and switch-off difference between solid fuel boiler (SFB) and storage tank.

If the temperature difference between the sensors defined for this function exceeds the value set here (ΔT SF **On**), the function switches **on** the assigned output (relay or signal output).

If the set temperature difference (ΔT SF **Off**) between the solids boiler and the storage tank is below, the function switches **off** the assigned output (relay or signal output).

Boiler sensor of this function

Sensor used as a solids boiler sensor. Considered for SF Tmin and ΔTon/off.

Storage sensor

Sensor used as a storage tank sensor. Considered for FS Tmax and ΔTon/off.

Solar



This function is used to control a solar pump.

Tmin Collector

Enable/start temperature at sensor X:

If this value on the specified sensor is exceeded and the other conditions are fulfilled, the controller will turn on the affiliated pump or the valve. If the temperature on the sensor falls 5 °C below this value, the pump or the valve will be turned off again.

ΔT Solar

Switch on/switch off temperature difference for sensor X:

If the temperature difference ΔT Solar between the reference sensors is exceeded and the other conditions are fulfilled, the controller will turn on the pump/valve on the corresponding relay. If the temperature difference falls to ΔT Off, the pump/valve will be turned off again.

Tmax Storage

Switch off temperature at sensor X:

If this value is exceeded at the specified sensor, the controller turn off the affiliated pump or the valve. If this value on the sensor is under-shot and the other conditions are fulfilled, the controller will turn on the pump or the valve.



Temperature values which are set too high can lead to scalding or damage to the system. Scalding protection must be provided by the customer!

Starting aid

For some solar systems, in particular for vacuum tube collectors, the measurement recording on the collector sensors may be too slow or imprecise, because the sensor is often not on the warmest spot. With an activated starting aid, the following procedure occurs: If the temperature on the collector sensor increases within a minute by the value defined under "increase", the solar circulation pump will be turned on for the set "purging time" so that the medium to be measured is transported to the collector sensor. If there is still no normal switching condition through this, there will be a 5 minute block time for the start wizard function.



This function should only be activated by a technician if problems occur with the measurement recording. Observe in particular the instructions from the collector manufacturer.

The menus "Purging time" and "Increase" are only displayed when the starting aid function is set to "On".

Purging time

If the temperature on the collector sensor increases within a minute by the value defined under "increase", the solar circulation pump will be turned on for the set "purging time" so that the medium to be measured is transported to the collector sensor. If the set ΔT is not reached, a 5-minute circulation pause time for the starting aid function will apply.

Increase

If the temperature at the collector reaches within a minute the value defined, the solar pump is turned on for the duration of the purging time.

Protective Functions

See "Protective functions for Solar" on page 40

Collector

Collector sensor

The collector sensor can be determined or changed here. The collector sensor set here is used for solar function (Tmin collector, ΔT Solar,...) as well as all protection functions Solar (collector protection, system protection, ...).

Solar storage

The solar storage sensor can be determined or changed here. The solar storage sensor determined here is used for the solar function (Tmax storage, ΔT Solar,...).

Solar bypass



Use a relay to switch a bypass valve or a bypass pump. With this function, the flow can be guided past the storage if the flow temperature at the bypass sensor is less than in the storage to be filled.

Variant

In this menu, you can set if the flow is guided through the bypass with a pump or a valve.

Bypass sensor

The reference sensor for the bypass function to be placed in the flow is selected in this menu.

Booster Pump



An additional booster pump can be activated with this function if the primary pump is no longer sufficient.

Charge time

When solar charging begins, the connected booster pump fills the system for the time set here.

Zone valve



This feature can control a solar accumulator charging valve. This enables charging of a second tank or second tank zone. The number on the left next to the zone valve indicates which tank / zone is being charged by the system.

Tmax storage 2

Maximum temperature storage 2. Up to this temperature, store 2 or the 2nd store zone will be charged.

Solar storage 2

In this menu, the storage tank sensor 2 must be set.

Heat exchanger



Adds a heat exchanger and a secondary pump to the solar circuit. Function is only visible if the additional function Solar is activated.

Heat exchanger sensor

The sensor that is used to turn on the secondary pump. It must be on the primary side on the heat exchanger.

Burner



This function requests a burner when a request of a heating circuit or the DHW function is present. Depending on the request, the burner will turn on in a more economic manner in the Eco-Mode if the solar circulation pump is running.

DHW request

The burner is started for a DHW - heat request.

Heating Circuit request

The burner is started for a heating circuit heat request.

Burner sensor

Reference sensor for burner function. If this temperature at the set sensor is exceeded, the burner is shut down.

Delay

Switch delay, valid for cooling and heat request. The burner first turns on after this time span if the switch conditions were reached and are still present. This feature prevents unnecessary switching by temperature fluctuations or gives time for a renewable energy source to generate energy.

Burner offset

When using the 0-10V outputs V1 or V2 for the burner function, the requested temperature is emitted through a corresponding voltage. This offset increases the requested temperature.

Eco mode (during solar charge)

The economy mode for this function can be operated in 2 different variants:

Turn off: The function is not started with an active solar charge.

Decrease:

For a heating request the function first turns on when the conditions and an additional offset were not met.

For a DHW request the function only activates when Teco is not met and de-activates when Teco + DHW-heating is achieved.

Tmax

Maximum temperature at the burner sensor. If this temperature at the set sensor is exceeded, the burner is shut down.

Boiler base temperature

Minimum temperature to avoid condensation and corrosion in the burner. Requires an assigned burner sensor. As soon as the temperature at the burner sensor falls below the set temperature and the heating circuit is not in summer shutdown, the burner is switched on.

Base hysteresis

Only visible when the boiler base temperature is set. Switch-off hysteresis for the boiler base temperature. If the burner has been switched on by the boiler base temperature, it runs until the boiler base temperature + base hysteresis at the burner sensor are reached.

Enable

(temporal) **enable for this function**

Here, the desired periods can be set in which the function is enabled.

For each weekday, three times can be specified, furthermore, you can copy individual day to other days.

Outside the set times the function is disabled.

Anti Legionella

See " Anti Legionella " on page 59.

Boiler pump



A boiler pump is turned on and off together with the burner. Function is only visible if the additional function Burner is activated.

Boiler pump Tmin

Minimum temperature at the burner sensor for enabling of the boiler pump. If this temperature is exceeded at the burner sensor, the burner pump is activated.

Compressor



The function switches on the compressor from a heat pump if a heat request from the heating circuit or DHW sensor is present.

DHW request

The compressor is started with a DHW - heat request.

HC request

The compressor is started with a heating circuit - heat request.

Cooling request

The compressor is started when cooling is requested.

Eco mode (during solar charge)

The economy mode for this function can be operated in 2 different variants:

Turn off: The function is not started with an active solar charge.

Decrease:

For a heating request the function first turns on when the conditions and an additional offset were not met.

For a DHW request the function only activates when Teco is not met and de-activates when Teco + DHW-heating is achieved.

Heating circuit offset

The temperature offset setting for the eco operating mode "Lower" (see above).

Min heat pump runtime

The compressor turns on at least for the set time.

Heat pump idle time

The compressor is blocked for this time after it is shut down.

Heat pump delay

Delay for this function. The function first turns on after this time span if the switch conditions were reached and are still present. This delay is intended to prevent unnecessary switching operations caused by temperature fluctuations or to give another energy source time to provide the necessary energy.

Storage charge pump (SLP) overshoot

The pump turns off after the compressor delayed by this time.

Bivalent temperature

Below the temperature set here, the next energy source is added. If the outside temperature falls below the value set here, when using another energy source (thermostat, electric heating rod, burner), the switch-on delay is cancelled and this is switched on immediately when heat is required. If several additional energy sources are used, they switch on one after the other, prioritized according to the switch-on delays.

Min. outdoor temperature

When the outdoor temperature set here is undershot, the heat pump switches off.

Periods

Approval time for the compressor function

Here the desired periods are set in which the compressor is approved. For each weekday, three times can be specified, furthermore, you can copy individual day to other days. The compressor is shut down outside of the set times.

Anti Legionella

See "Anti Legionella" on page 59.

Loading pump



The function switches on the charge pump of a heat pump if a heat request from the heating circuit or DHW sensor is present. This function can only be selected if a compressor was activated on a different relay.

Storage charge pump (SLP) overshoot

The pump turns off after the compressor delayed by this time.

Glycol pump




The glycol pump is turned on and off together with the compressor. Function is only visible if the additional function Compressor is activated.

Gylcol pump lag

After shutting down the compressor, the pump remains on for the time set here.

Return flow increase



With this function, for example, the return temperature of a heating circuit is increased through the storage.

Return flow increase Tmin

Minimum temperature at storage sensor to enable the return flow increase. As soon as this temperature at the set storage sensor is exceeded and adequate ΔT is present, the relay is turned on.

Return flow increase Tmax

Maximum temperature set on the storage sensor set for this function. If this temperature is exceeded at the RL storage sensor, the function is deactivated again.

ΔT return flow

Switch on temperature difference:

The relay is turned on if this temperature difference is exceeded between the storage sensor and the recooling sensor.

Switch off temperature difference:

The relay is turned off if this temperature difference is undershot between the storage sensor and the recooling sensor.


Return flow sensor

Selection of the return flow sensor.

Storage sensor


Selection of the storage sensor.

Domestic hot water valve



This function activates a DHW-valve or -pump, if a DHW heat request is present.

Circulation



Depending on the temperature and time approval, a circulation pump is turned on for the DHW storage.

Tmin

If this value at the circulation sensor is undershot and the circulation is approved or there is a request through a tapping process, the circulation pump is started.

Hysteresis

If the circulation Tmin value is exceeded by the value set here, the circulation pump will be shut down.

Circulation sensor

Select the temperature sensor for the circulation.

Circulation pause time

In order to prevent an excessive switching on of the circulation pump, a block time can additionally be set up here to prevent it from being turned on again. If the circulation pump has turned off, it can first go into operation again after the expiration of the time set here.

Purging time

If during the operation of the circulation pump, also after expiration of the optional purging time, the previously selected temperature at the circulation sensor is not reached, the pump will turn off. This function should protect against unnecessarily long operation of the circulation pump, for example, if the warm water storage is too cold.

Circulations periods


Operating times of the circulation

Here the desired periods are set in which the circulation is approved. For each weekday, three times can be specified, furthermore, you can copy individual day to other days. The circulation is shut down outside of the set times.

Anti Legionella

See "Anti Legionella" on page 59.

Error Messages



The relay is switched on if one or several of the set protective functions are activated. This function can be inverted so that the relay is turned on (Duration on) and then turned off again if a protective function is activated.

Error message

Activate or deactivate function

The additional function error message activates the relay for certain events and only deactivates again when the information message to each event was read.

The following messages are available:

Collector protection

System protection

Frost Protection

Recooling

Anti Legionella

Message

Sensor error VFS1

Sensor error VFS2

Pressure monitor



In this menu, the system pressure monitoring can be activated through a direct sensor. As soon as the set pressure conditions are undershot or exceeded, the set relay will switch on.

Pressure monitor

Relay turns on if the pressure goes below the minimum or exceeds the maximum.

RPS-Type

Type of pressure sensor

In this menu, you can adjust which pressure sensor is being used. Please note: If e.g. VFS1 is connected, RPS1 option is not shown.

RPS Max

Maximum pressure in the system. If this pressure is exceeded, the controller emits an error notification and the relay switches.

RPS Min

Minimum pressure. If this pressure is not met, the controller emits an error notification and the relay switches.

Dehumidifier



Operating mode

The operating mode of the dehumidifier function can be set here.

Cooling : In the cooling operating mode, the dehumidifier turns on when the target humidity is exceeded, if the S/W day temperature is exceeded and the function is approved.

Cooling +Circ.: In the cooling +circulation operating mode, the dehumidifier turns on when the target humidity is exceeded, if the S/W day temperature is exceeded and the heating circuit pump is running and the function is approved.

Year round: In the year round operating mode, the dehumidifier turns on when the target humidity is exceeded if the function is approved.

Reference humidity

Reference value for the humidity in the room.

If the value set here is exceeded, the relay will turn on the dehumidifier if this is approved for the time. The dehumidifier is turned off if the reference value hysteresis is not met.

Hysteresis

Hysteresis of setpoint for the humidity.

Dehumidifier periods

Approval time for the dehumidifier

Here the desired periods are set in which the dehumidifier is approved. For each weekday, three times can be specified, furthermore, you can copy individual day to other days. The dehumidifier is shut down outside of the set times.

Parallel operation



The relay runs simultaneously with the set relay.

Parallel operation

Here you can additionally set the switch mode.

On : The function switches parallel to the set signal output.

Inverted : The function switches contrary to the set signal output.

Parallel to

Here, the output can be selected, which this function should be activated parallel to. Every available signal output can be selected.

Delay

In this menu, it is set how long to wait after switching the signal output until the parallel operated relay switches as well.

Follow-up time

In this menu, it is set how long the parallel-operated relay continues to operate after the set signal output has been deactivated.

Remote



Relay status

The relay status determines if the condition of the relay is in sleep mode, and it also applies if the controller is restarted.

Title

Here you can assign a name for the selected relay. This name also appears on the Sorel-Connect page to simplify the assignment.

Always on



Relay is permanently switched on.

Anti Legionella



The anti-legionella function is an additional function for certain relay functions such as: electric heating rod, burner, circulation, compressor.

With the help of the anti legionella function (hereinafter referred to as: AL), the system can be heated up at selected times in order to free it of legionella.



In the delivery state, the anti legionella function is switched off.



As soon as it has heated up with "AL" turned on, information with the date will be shown in the display.



This anti legionella function does not offer any secure protection against legionella, because the controller requires an

adequate added amount of energy and the temperatures cannot be monitored in the entire storage area and the connected pipe system.



During the operation of the anti legionella function, if applicable, the storage is heated above the set value “Tmax”, which may lead to scalding and system damage.

AL Tset

For a successful heating, this temperature has to be reached at the AL sensor(s) for the exposure time period.

AL residence time

For this period of time the AL Tsettemperatures at the activated AL-sensors have to be reached for a successful heating.

Last AL heat

This displays when the last successful heating has occurred.

AL sensor 1


On this sensor, the temperature of the AL function is measured.


AL Sensor 2


Optional AL sensor

If this sensor is set for a successful heating Tset AL have to be achieved at this sensor too for the action time.

Replacing the Fuse

 Repairs and maintenance may only be performed by a specialist. Before working on the unit, switch off the power supply and secure it against being switched on again! Check that there is no power flowing!

 Only use the included safeguard or a similar safeguard with the following specifications: T2A / 250 V.

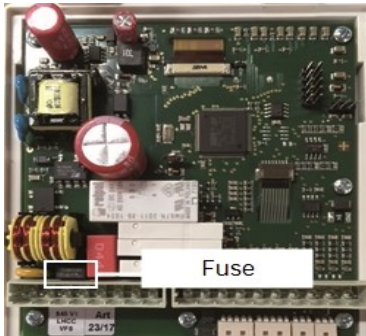


If the mains voltage is switched on and the controller still does not function or display anything, then the internal device fuse may be defective. First find the external fault source (e.g. pump), replace it and then check the device fuse.

To replace the device fuse, open the device as described under "See " Wall Installation " on page 11", remove the old fuse, check it and replace if necessary.

Then first recommission the controller and check the function of the switch outputs in manual mode as described in Section 4.1.

Maintenance

 In the course of the general annual maintenance of your heating system, the functions of the controller should also be checked by a specialist and the settings should be optimized if necessary.

Performing maintenance:

- Check the date and time See " Time & Date " on page 31
- Assess/check plausibility of statistics See " Statistics " on page 30
- Check the error memory See " Notifications " on page 30
- Verify/check plausibility of the current measurement values See " Measurement values " on page 29
- Check the switch outputs/consumers in manual mode See " Manual " on page 32
- Possible optimization of the parameters setting (**only on customers request**)

Possible error messages

Possible error messages	Notes for the specialist
Sensor x defective	Means that either the sensor, sensor entrance on the controller or the connecting wire was defective (See " Temperature Resistance Table for Pt1000 Sensors " on page 23).
Collector alarm	Means that the temperature on the collector set under "Collector protection" was exceeded.
Restart	Means that the controller was restarted, for example, due to a power outage. Check date & time!
Time & Date	This display appears automatically after a longer network disruption, because the time & date must be examined and, if applicable, adjusted.
No flow	If ΔT between store and collector is 50 ° C or more for 5 minutes, this message is displayed.
Frequent on / off	A relay was switched on and off more than 5 times within 5 minutes.

Tips



The service values include not only current measurement values and operating states, but also all of the settings for the controller. Write the service values down just once after commissioning has been successfully completed.



In the event of uncertainty as to the control response or malfunctions the service values are a proven and successful method for remote diagnosis. Write the service values down at the time that the suspected malfunction occurs. Send the service value table by fax or e-mail with a brief description of the error to the specialist or manufacturer.



To protect against loss of data, record any statistics and data of particular importance at regular intervals.

Support Guideline

If there are errors with your device, please proceed as follows:

1. Read user manual
2. Check FAQ
3. Watch help-video on YouTube
4. Talk to an installation technician/tradesman
5. Contact SOREL Support - provide the following information:

What is the Problem?	<ul style="list-style-type: none">• Installation problem• New problem• Change request
Controller Type/Controller Name (9.1.)	
Software Version (9.2.)	
Program (7.1.)	
Additional function (7.7. - 7.12.)	
Accessories (e.g. room thermostats + Software Version)	
Sensor values of the sensors (1.1. - 1.10.)	
Error messages/frequency of error/error description	
Further Information	

Appendix

Signal

In this menu, the preset profiles for the signal can be selected or under "manual" all settings can be done personally. The settings can still be changed after a profile has been selected.

Output Signal

In this menu the type of actors are set: heating pumps have the greatest output with a small input signal, solar pumps in contrast have very little output with a small input signal. Solar = normal, heating = inverted. For 0-10 V pump always choose the "Normal" setting

PWM / 0-10V off

This voltage / this signal is emitted if the actor is turned off (actor with cable break detection require a minimum voltage / a minimum signal).

PWM / 0-10V on

This voltage / signal is required the actuator to switch on and run at minimum speed.

PWM / 0-10V max.

With this value, the maximum voltage level / maximum signal can be specified for the highest speed of the actuator, which is used, for example, during the purging or manual operation.


Speed when „On“

In this menu, the calculation basis of the displayed speed is changed. If, for example, 30% is specified here, the signal/voltage set under “PWM On” / “0-10V On” will be displayed during creation so that a 30% speed is present. When creating the signal/voltage of PWM Max / 0-10V Max, 100% speed is displayed. Temporary values are calculated correspondingly.





This function does not influence the rule, but rather only the display on the status screen.

Example for signal settings

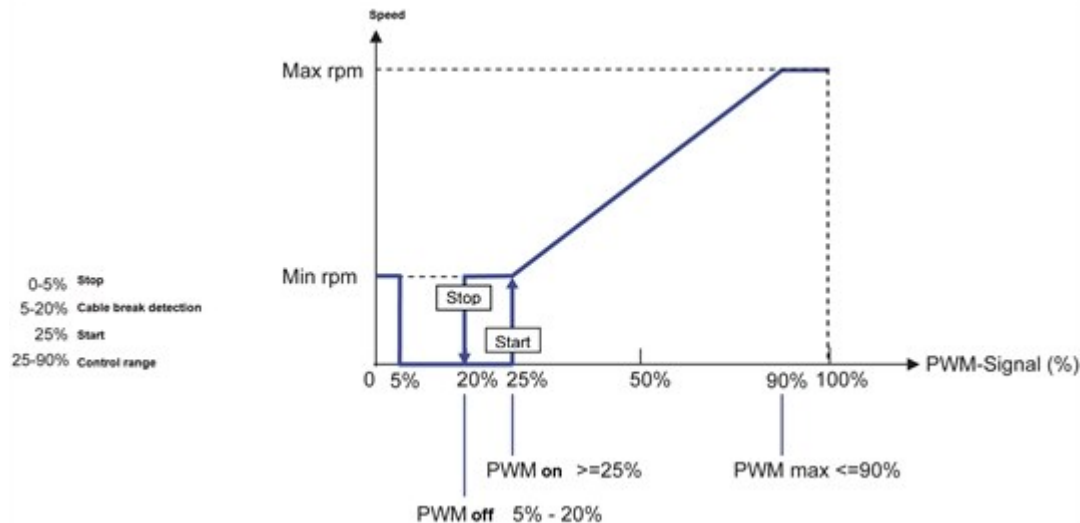

Technical data PWM and 0-10V

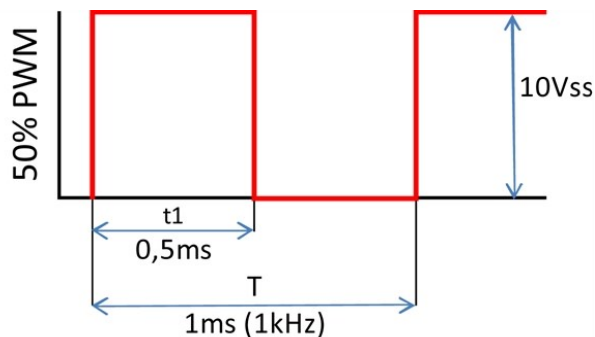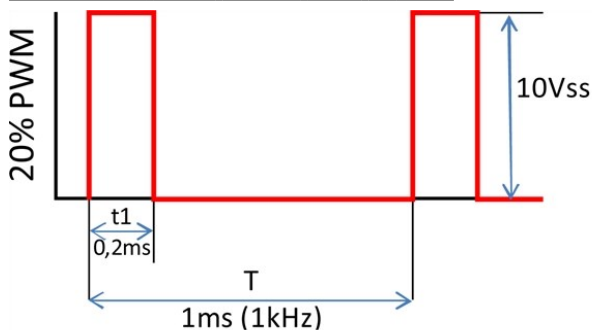

PWM: 20% to 100%, 1kHz Designed for a load of 10K Ohm



Technical data 0-10V: 0-10V: 2V to 10V (20% to 100%) Designed for a load of 10K Ohm.
10V = 100% Speed 5V = 50% Speed 2V = 20% Speed 0V = Off

Show signal

Represents the set signal in a graphic and text overview.

Final Declaration

Although these instructions have been created with the greatest possible care, the possibility of incorrect or incomplete information cannot be excluded. Subject as a basic principle to errors and technical changes.

Date and time of installation:

Name of installation company:

Space for notes:

Your specialist dealer:

Manufacturer:

SOREL GmbH Mikroelektronik
Reme-Str. 12
D - 58300 Wetter (Ruhr)

+49 (0)2335 682 77 0
+49 (0)2335 682 77 10

info@sorel.de
www.sorel.de

Version: 13.05.2022
SOREL